

---



## SERVICE HINTS

### G 1(A) GENERATOR (ALTERNATOR)

- (A) 1-GROUND: 13.9–15.1 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 25°C (77°F)  
13.5–14.3 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 115°C (239°F)  
(A) 2-GROUND: 0–4 VOLTS WITH IGNITION SW AT ON POSITION AND ENGINE NOT RUNNING

## ○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
C11	B	23	F10	A	22	G 2	B	22
C12	A	23	F13		23			
F 8	B	22	G 1	A	22			

## ○ : RELAY BLOCKS

 


CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)

## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I12	28	COWL WIRE			

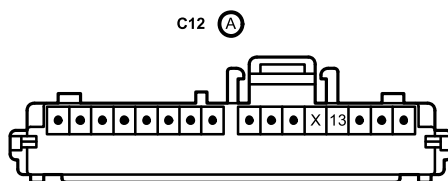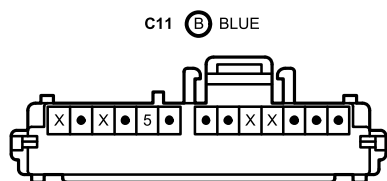

F13  
(SEE PAGE 20)

