





*1 : 22R-E A/T
 *2 : 3VZ-E, 22R-E M/T

*3 : W/ HEADLIGHT AUTO CUT ECU
 *4 : W/O HEADLIGHT AUTO CUT ECU

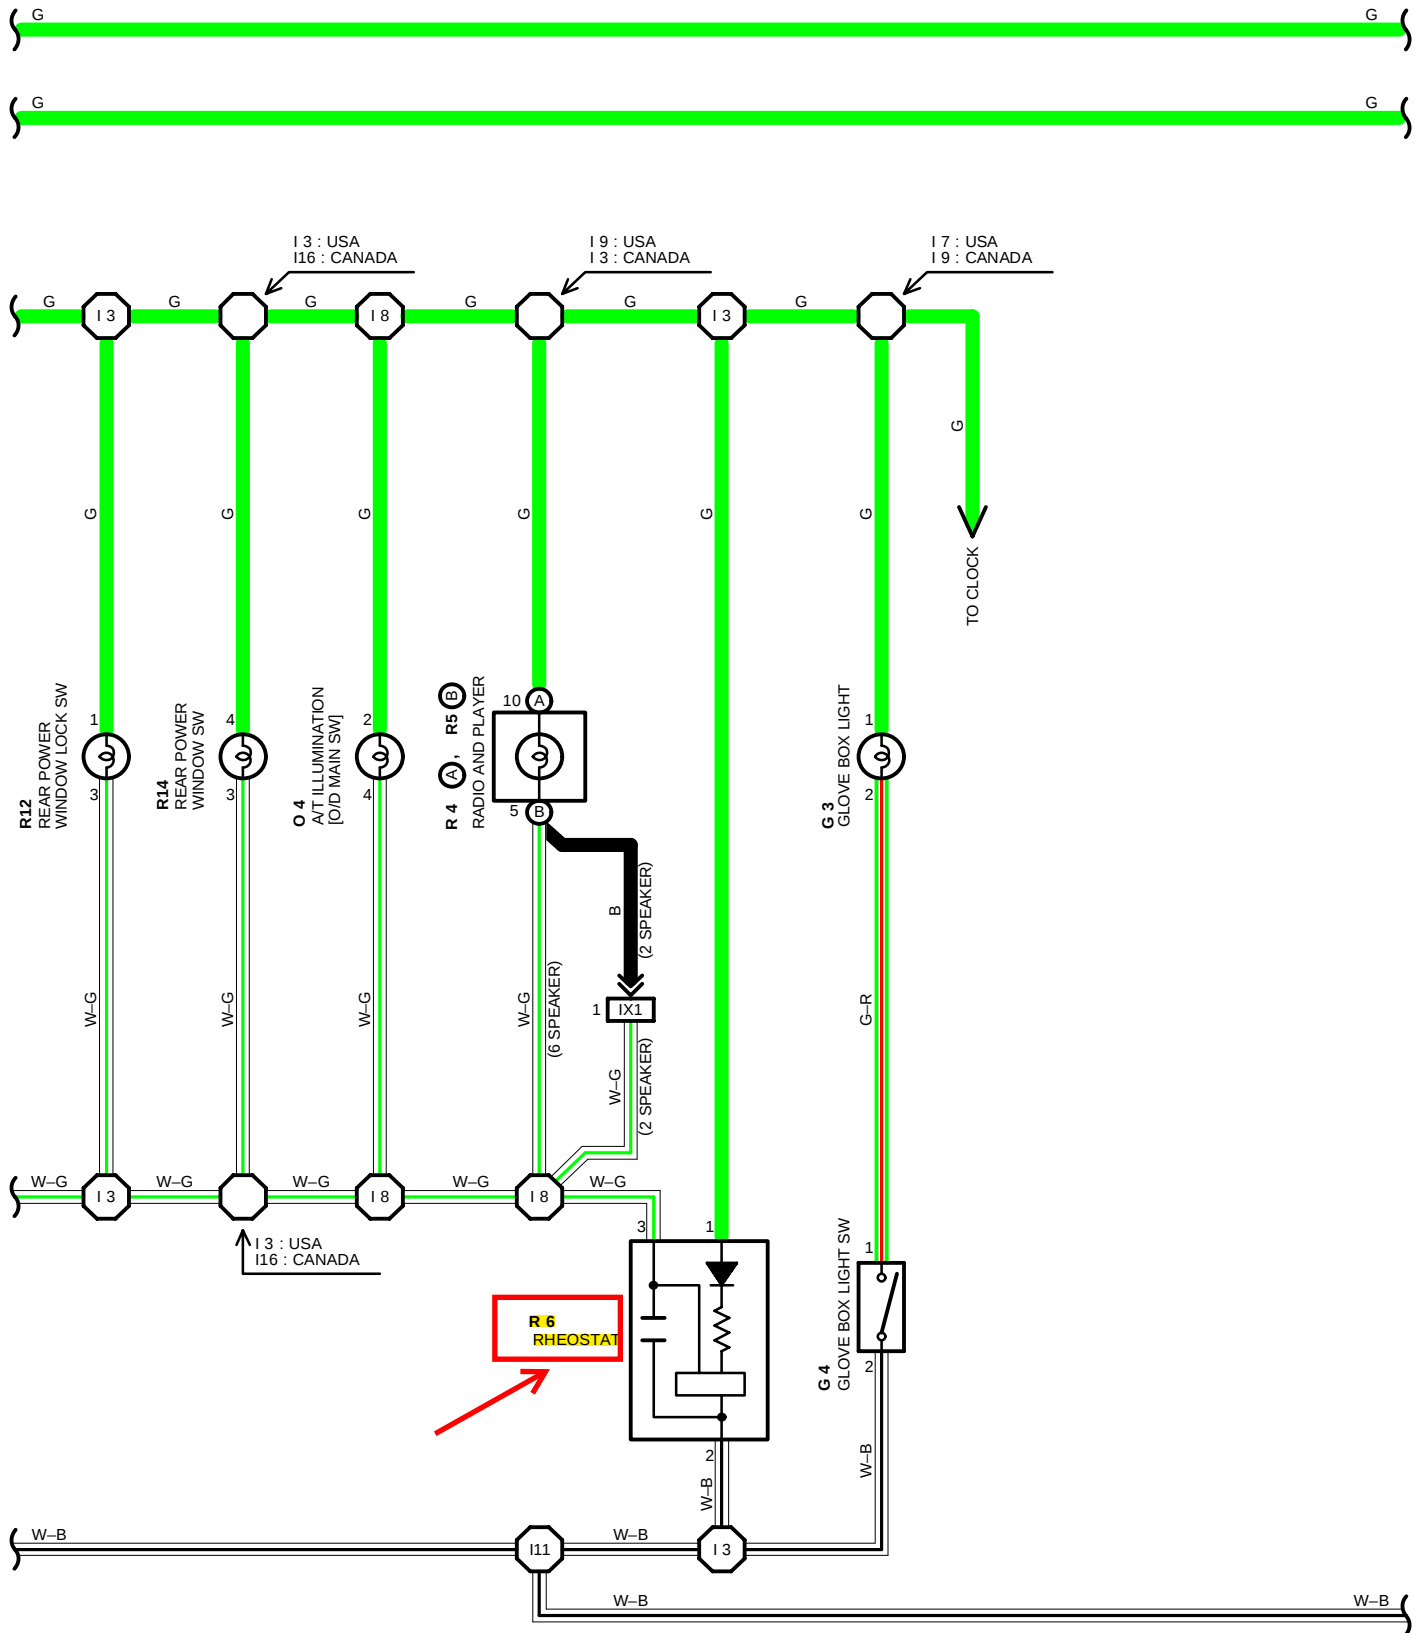

TAILLIGHT AND ILLUMINATION

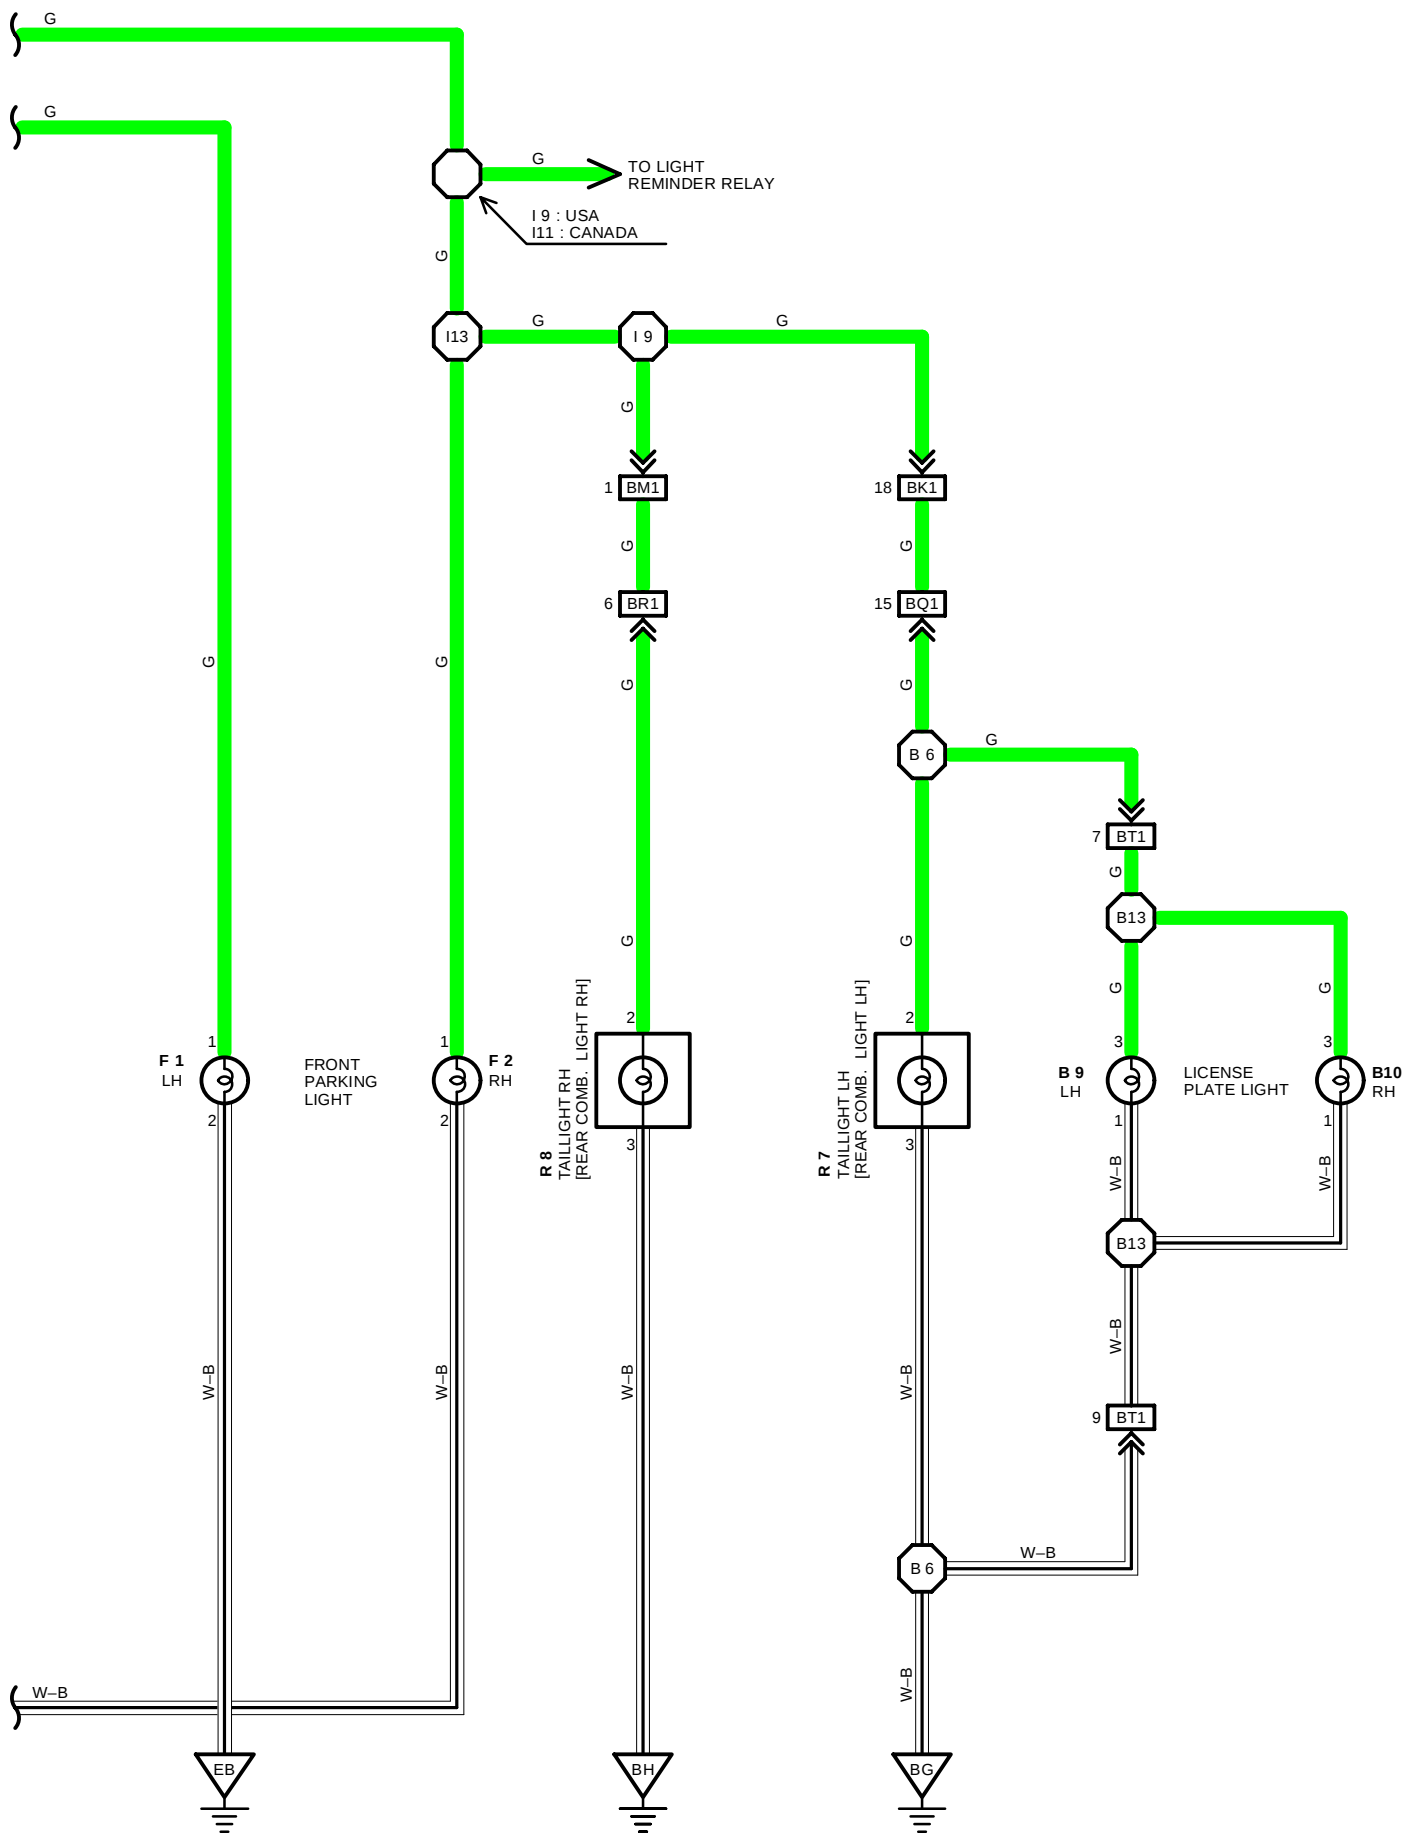

SERVICE HINTS

C15 LIGHT CONTROL SW [COMB. SW]

10–11: CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

TAILLIGHT RELAY

2–3: CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

: CLOSED WITH ENGINE RUNNING AND PARKING BRAKE LEVER RELEASED (CANADA)

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A14	28	F 1	26 (22R–E)	O 4	28
B 9	29	F 2	24 (3VZ–E)	R 3	C 28
B10	29		26 (22R–E)	R 4	A 28
C 6	28	G 3	28	R 5	B 28
C11	28	G 4	28	R 6	28
C15	28	H 6	28	R 7	29
D 6	28	H 7	28	R 8	29
E 5	28	H11	28	R12	29
F 1	24 (3VZ–E)	I16	28	R14	29

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IX1	34	COWL WIRE AND RADIO SUB WIRE (INSTRUMENT PANEL BRACE)
BK1	36	FLOOR NO. 3 LH WIRE AND COWL WIRE (LEFT SIDE OF FRONT LH SEAT)
BM1	36	FLOOR NO. 3 RH WIRE AND COWL WIRE (RIGHT SIDE OF FRONT RH SEAT)
BQ1	36	FLOOR NO. 3 LH WIRE AND FLOOR NO. 2 WIRE (LEFT SIDE OF REAR LH SEAT)
BR1	36	FLOOR NO. 3 RH WIRE AND FLOOR WIRE (RIGHT SIDE OF REAR RH SEAT)
BT1	36	BACK DOOR NO. 1 WIRE AND FLOOR NO. 2 WIRE (BESIDE LEFT REAR COMB. LIGHT)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	30 (3VZ–E)	LEFT FENDER
	32 (22R–E)	
IE	34	LEFT KICK PANEL
IF	34	RIGHT KICK PANEL
BG	36	UNDER LEFT REAR PILLAR
BH	36	UNDER RIGHT REAR PILLAR

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 3	34	COWL WIRE	I13	34	COWL WIRE
I 6			I16		
I 7			I18	34	ENGINE WIRE
I 8			B 6	36	FLOOR NO. 2 WIRE
I 9			B13	36	BACK DOOR NO. 1 WIRE
I11					

TAILLIGHT AND ILLUMINATION

питание (1-2) к
лампам подсветки
приборной панели

