



Land Cruiser Heavy Duty

REPAIR MANUAL

- **CHASSIS**
- **BODY**

PRODUCTION DATES 10/84 THRU 1/90

FOREWORD

This repair manual has been prepared to provide information covering general service repairs for the chassis and body of the TOYOTA LAND CRUISER (Heavy-Duty).

Applicable models:

FJ 62, 70, 73, 75 series

BJ 60, 70, 73, 75 series

HJ 60, 75 series

For service of the TOYOTA LAND CRUISER (Heavy-Duty), refer to the following repair manuals.

 
3F Engine Repair Manual	(Pub. No. 36253E)
B series Engine Repair Manual	(Pub. No. RM035E)
2H Engine Repair Manual	(Pub. No. 36048E)
A440L, A440F Automatic Transmission Repair Manual	(Pub. No. 36264E)

For instructions on how to use this manual, please refer to page IN-2. All information contained in this manual is up-to-date at the time of publication. However, specifications and procedures are subject to change without prior notice.

TOYOTA MOTOR CORPORATION

TOYOTA LAND CRUISER (Heavy-Duty) REPAIR MANUAL FOR CHASSIS & BODY

INTRODUCTION	IN
CLUTCH	CL
MANUAL TRANSMISSION	MT
AUTOMATIC TRANSMISSION	AT
TRANSFER	TF
PROPELLER SHAFT	PR
FRONT AXLE AND SUSPENSION	FA
REAR AXLE AND SUSPENSION	RA
BRAKE SYSTEM	BR
STEERING	SR
BODY ELECTRICAL SYSTEM	BE
BODY	BO
WINCH	WI
AIR CONDITIONING SYSTEM	AC
SERVICE SPECIFICATIONS	A
STANDARD BOLT TORQUE SPECIFICATIONS	B
SST AND SSM	C
ELECTRICAL WIRING DIAGRAMS	D



2 LAND CRUISER (Heavy-Duty) (Cont'd)




Air Conditioner, Cooler and Heater (60 Series)




Rear Air Conditioner (60 Series)




Combination Meter (3F)

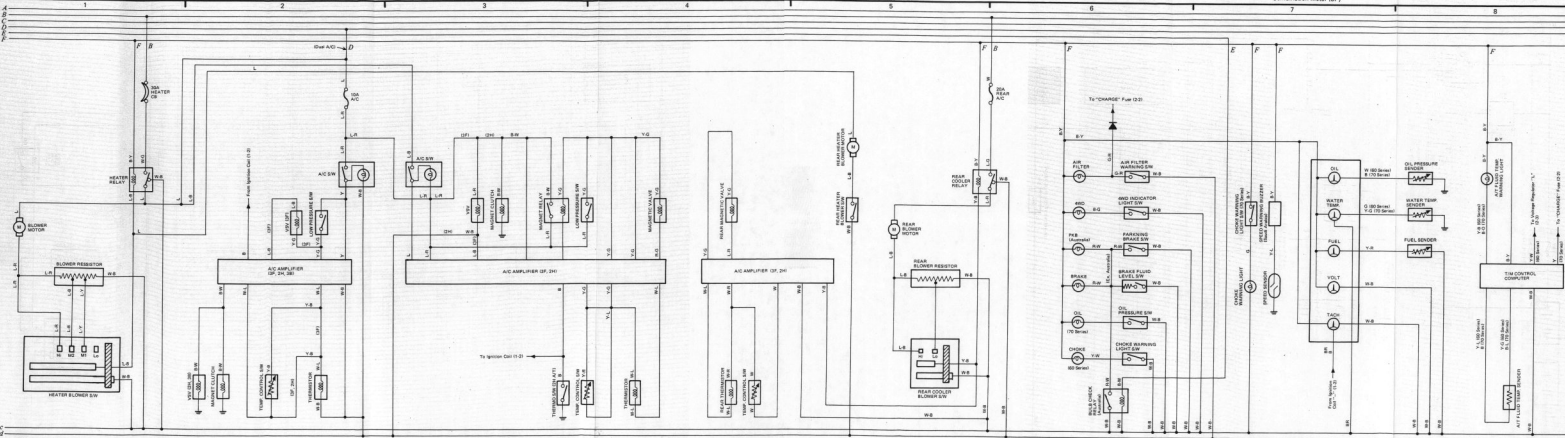

Ground points C = Located under left front pillar d = Located under right front pillar

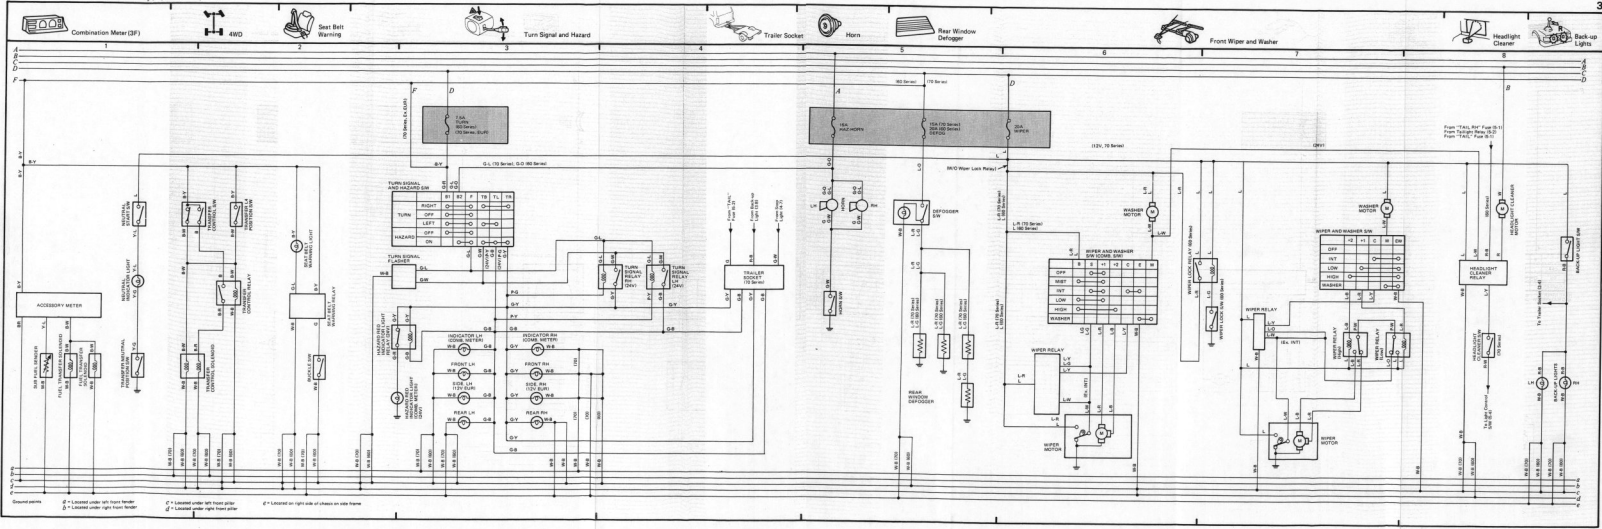

4 LAND CRUISER (Heavy-Duty)

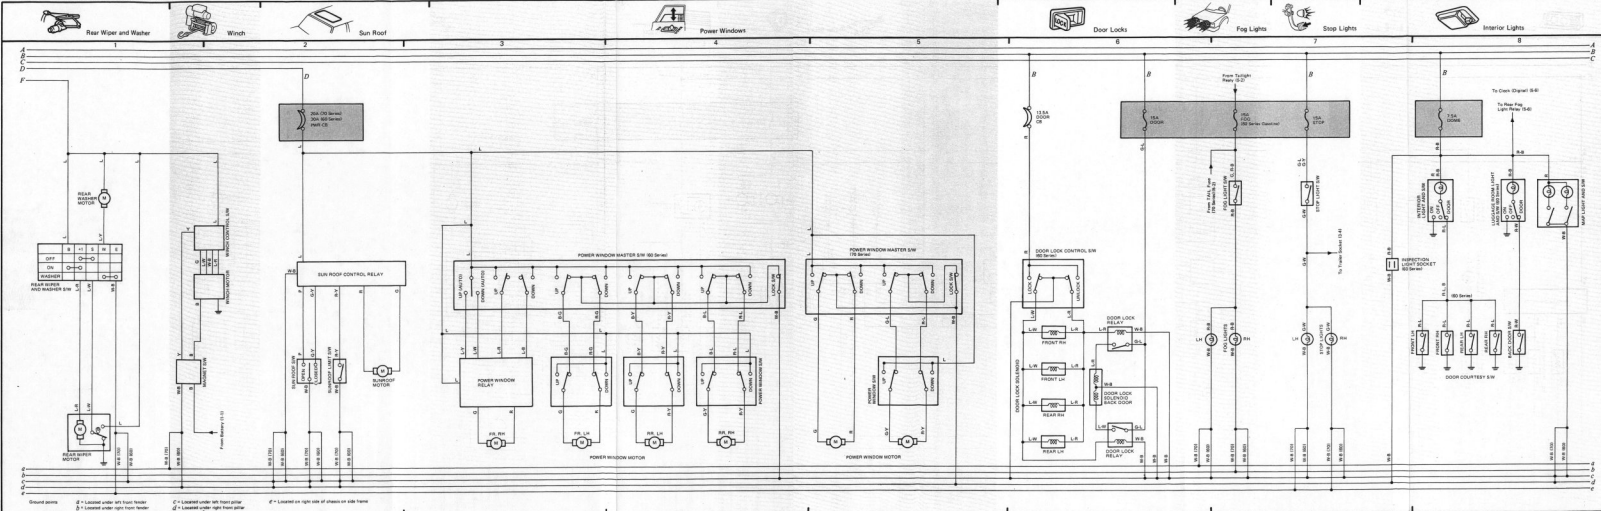



Radio and Tape Player



Power Source



Starting




EDIC



Combination Meter (38.2H)



Glow Plug

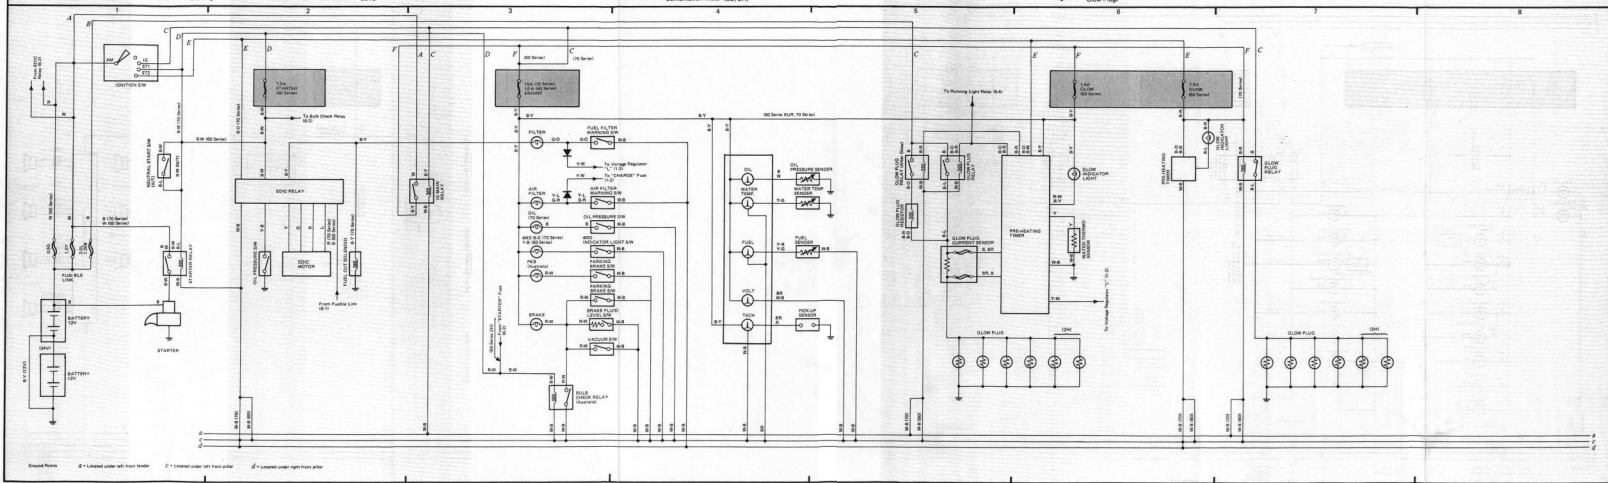

Ground Points g = Located under left front fender c = Located under left front pillar d = Located under right front pillar