


REAR HEATER

* 1: 22R-E A/T
* 2: 3VZ-E, 22R-E M/T

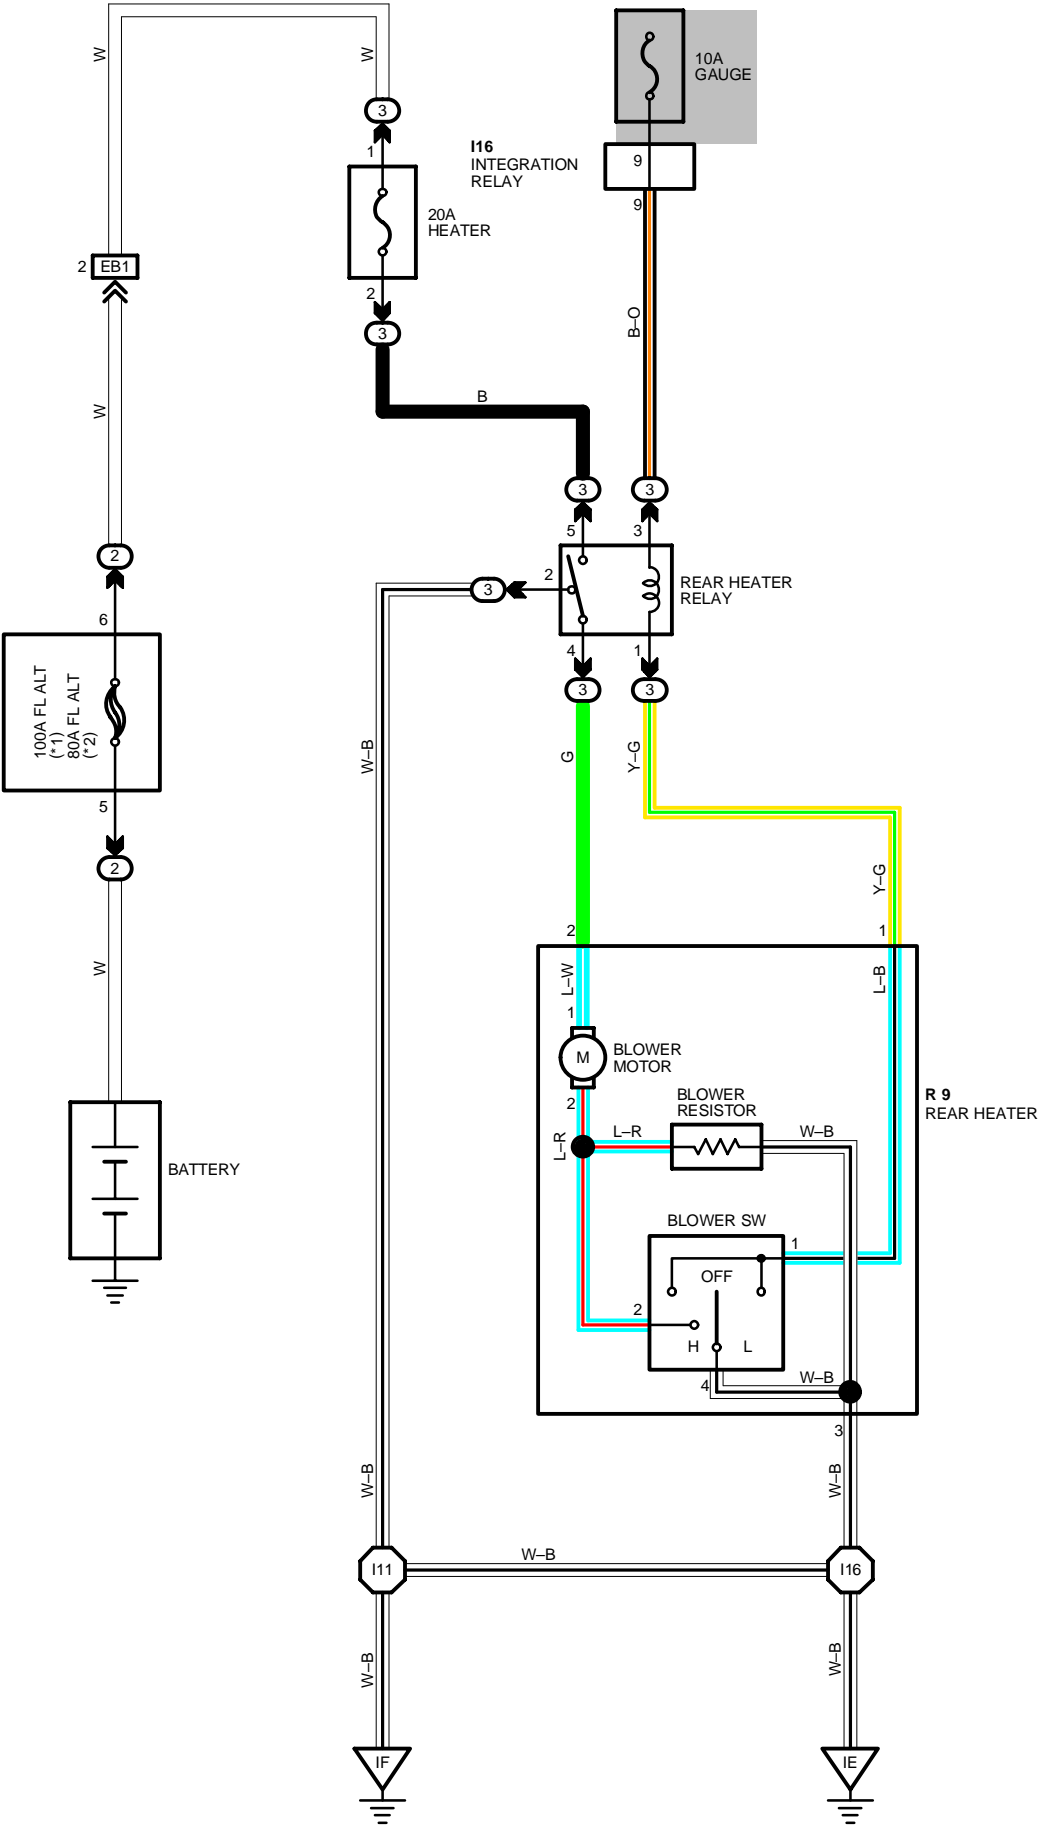

SERVICE HINTS

REAR HEATER RELAY

(3)5- (3)4 : CLOSED WITH IGNITION SW AT **ON** POSITION AND REAR HEATER BLOWER SW AT **HIGH** OR **LOW** POSITION

○ : PARTS LOCATION

| CODE | SEE PAGE | CODE | SEE PAGE | CODE | SEE PAGE |
|------|----------|------|----------|------|----------|
| I16 | 28 | R 9 | 29 | | |

○ : RELAY BLOCKS

| CODE | SEE PAGE | RELAY BLOCKS (RELAY BLOCK LOCATION) |
|------|----------|--------------------------------------|
| 2 | 22 | R/B NO. 2 (ENGINE COMPARTMENT RIGHT) |
| 3 | 23 | R/B NO. 3 (RIGHT KICK PANEL) |

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|------------|--|
| EB1 | 30 (3VZ-E) | COWL WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2) |
| | 32 (22R-E) | |

▽ : GROUND POINTS

| CODE | SEE PAGE | GROUND POINTS LOCATION |
|------|----------|------------------------|
| IE | 34 | LEFT KICK PANEL |
| IF | 34 | RIGHT KICK PANEL |

○ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|----------|---------------------------------|
| I11 | 34 | COWL WIRE | I16 | 34 | COWL WIRE |

