


Connector Joining Wire Harness and Wire Harness

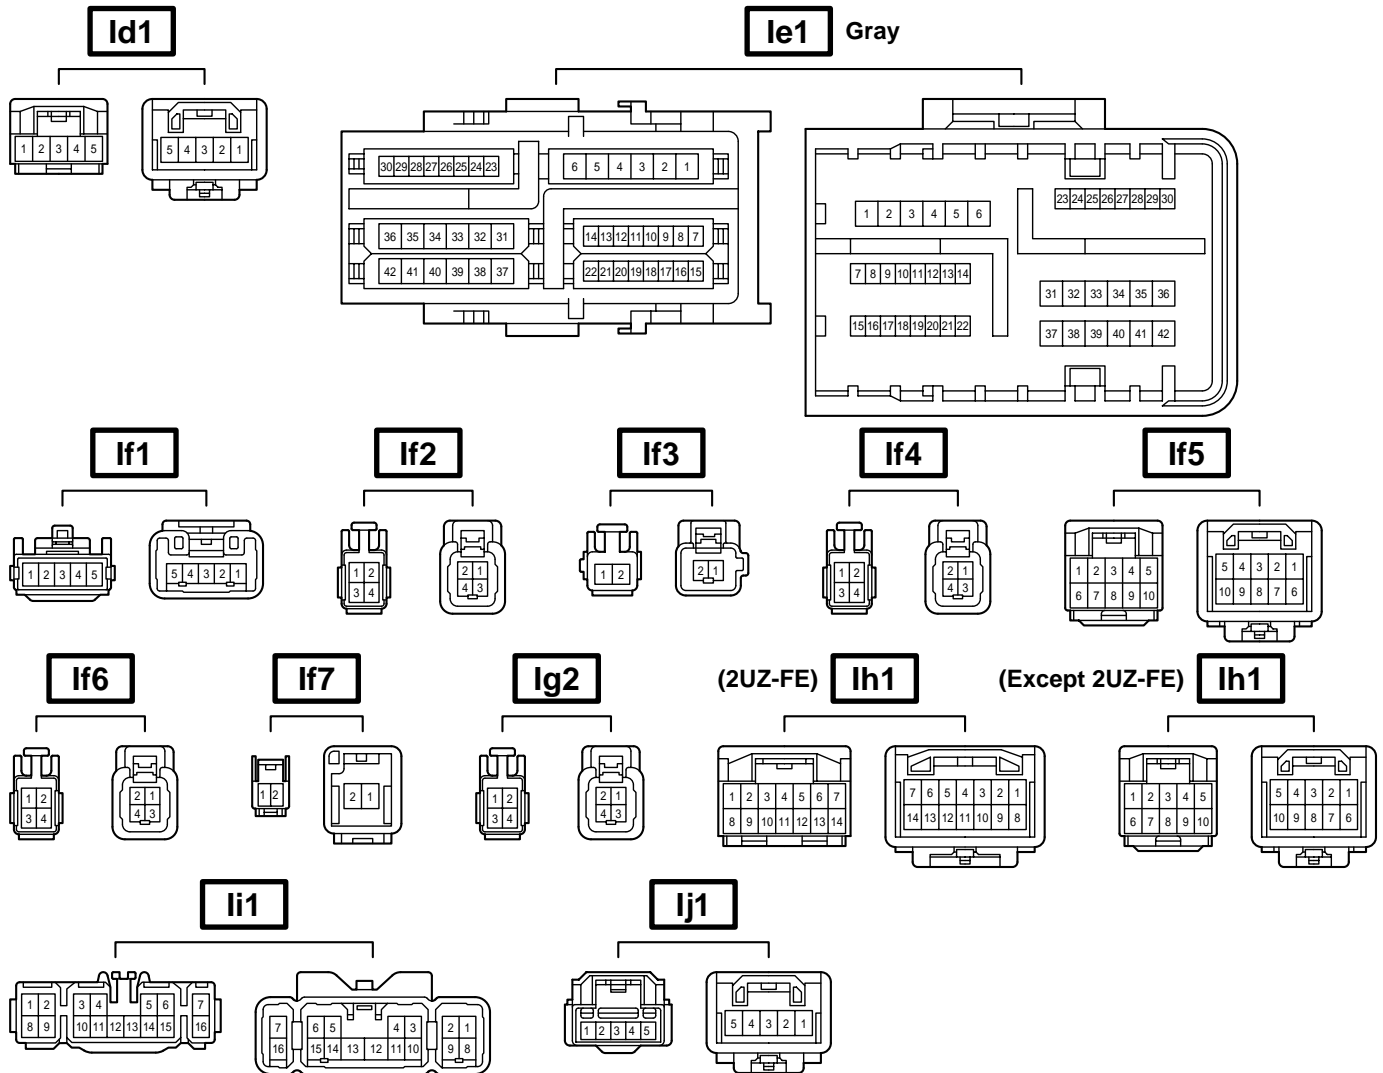

Code	Joining Wire Harness and Wire Harness (Connector Location)
Id1	Dash Wire and Dash Wire (Behind the Front Console)
le1	Dash Wire and Floor No.2 Wire (Right Side of Front Console)
lf1	Dash Wire and Dash Wire (Instrument Panel Center)
lf2	
lf3	
lf4	
lf5	
lf6	
lf7	
lg2	Dash Wire and Dash Wire (Behind the Glove Box)
lh1	Engine Wire and Engine Wire (Behind the Glove Box)
li1	Dash Wire and Computer No.2 Wire (Behind the Glove Box)
lj1	Instrument Panel Integration Wire and Instrument Panel No.3 Wire (Right Side of Instrument Panel)