

Fuse Block Assembly

Fuse		System
7.5A	ALT-S	<u>Charging (1GR-FE) (Before Aug. 2016 Production)</u>
		<u>Charging (1HZ) (Before Aug. 2016 Production)</u>
		<u>Charging (1VD-FTV) (Before Aug. 2016 Production)</u>
10A	A/F	<u>Engine Control (1GR-FE) (Before Aug. 2016 Production)</u>
		<u>Fuel Tank Changeover (1GR-FE) (Before Aug. 2016 Production)</u>
10A	ETCS	<u>Engine Control (1GR-FE) (Before Aug. 2016 Production)</u>
		<u>Fuel Tank Changeover (1GR-FE) (Before Aug. 2016 Production)</u>
10A	HORN	<u>Horn (Before Aug. 2016 Production)</u>
15A	EFI MAIN	<u>Engine Control (1VD-FTV) (Before Aug. 2016 Production)</u>
15A	EFI MAIN2	<u>Engine Control (1VD-FTV) (Before Aug. 2016 Production)</u>
15A	TURN&HAZ	<u>Turn Signal and Hazard Warning Light (12V Battery Type) (Before Aug. 2016 Production)</u>
		<u>Turn Signal and Hazard Warning Light (24V Battery Type) (Before Aug. 2016 Production)</u>
25A	EFI	<u>Engine Control (1GR-FE) (Before Aug. 2016 Production)</u>
		<u>Fuel Tank Changeover (1GR-FE) (Before Aug. 2016 Production)</u>
30A	ABS SOL	<u>ABS (Before Aug. 2016 Production)</u>
50A	ABS MTR	<u>ABS (Before Aug. 2016 Production)</u>
50A	AM2	<u>Starting (1GR-FE, 1VD-FTV) (Before Aug. 2016 Production)</u>
		<u>Starting (1HZ) (Before Aug. 2016 Production)</u>
50A	HEAD	<u>Headlight (Before Aug. 2016 Production)</u>
		<u>Headlight Beam Level Control (Before Aug. 2016 Production)</u>
50A	MAIN1	<u>Engine Control (1GR-FE) (Before Aug. 2016 Production)</u>
		<u>Front Fog Light (Before Aug. 2016 Production)</u>
		<u>Fuel Tank Changeover (1GR-FE) (Before Aug. 2016 Production)</u>
		<u>Illumination (Before Aug. 2016 Production)</u>
		<u>Light Reminder (Before Aug. 2016 Production)</u>
		<u>Rear Fog Light (Before Aug. 2016 Production)</u>
		<u>Taillight (Before Aug. 2016 Production)</u>
		<u>Trailer Socket (Before Aug. 2016 Production)</u>