



## REAR AXLE SHAFT AND AXLE HUB (Full-Floating Type) COMPONENTS

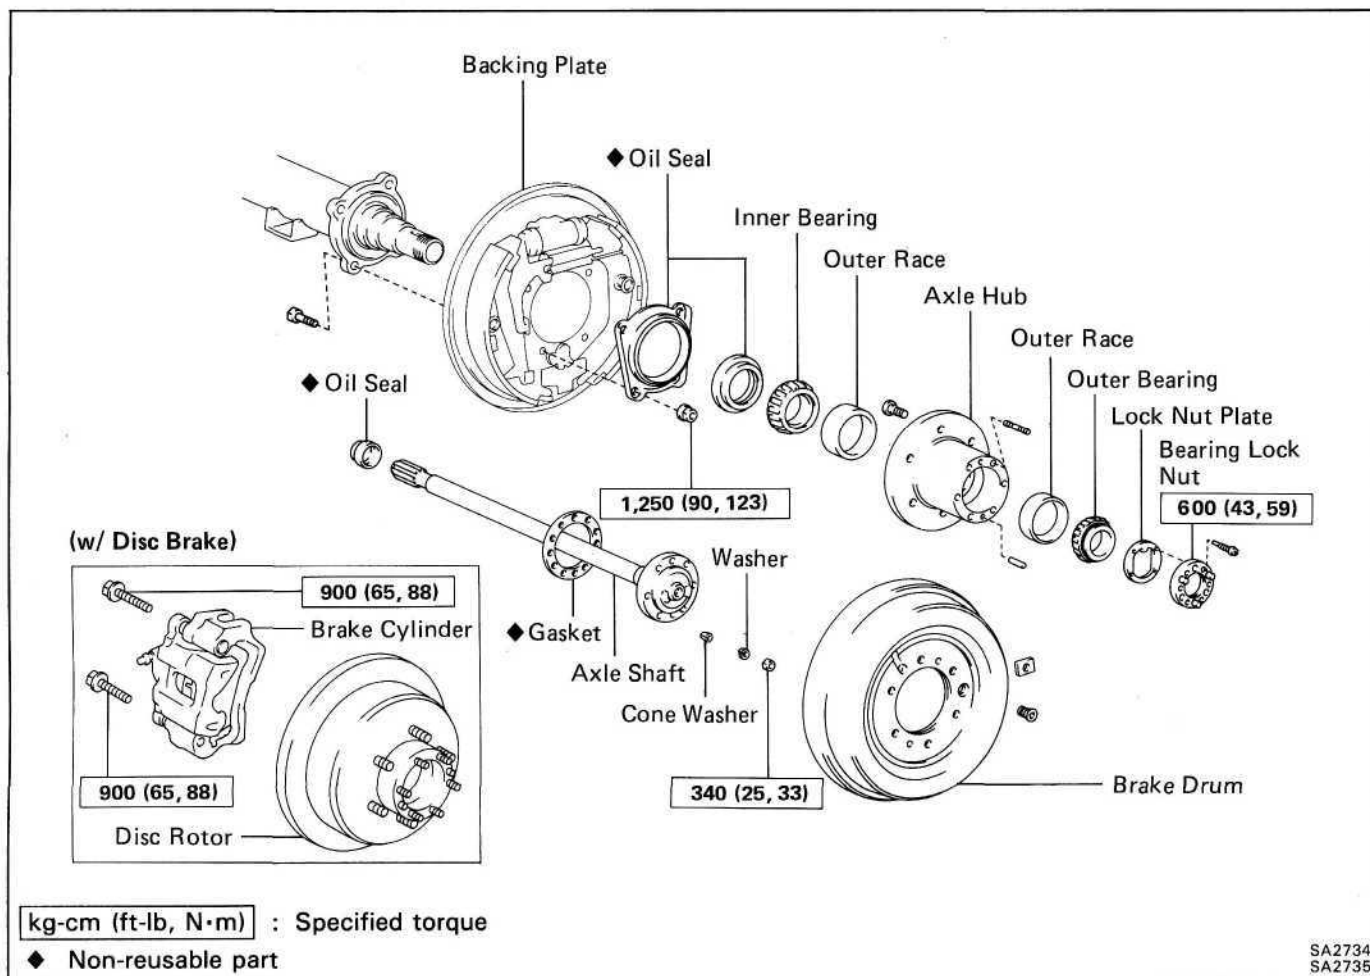

### REMOVAL OF REAR AXLE SHAFT

#### 1. REMOVE AXLE SHAFT SET NUT

Remove the six set nuts and washers.

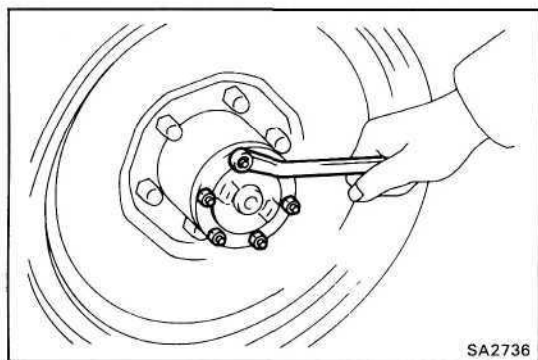

#### 2. REMOVE CONE WASHER

Using a hammer and brass bar, drive on the bolt and remove the six cone washers.

