


*A

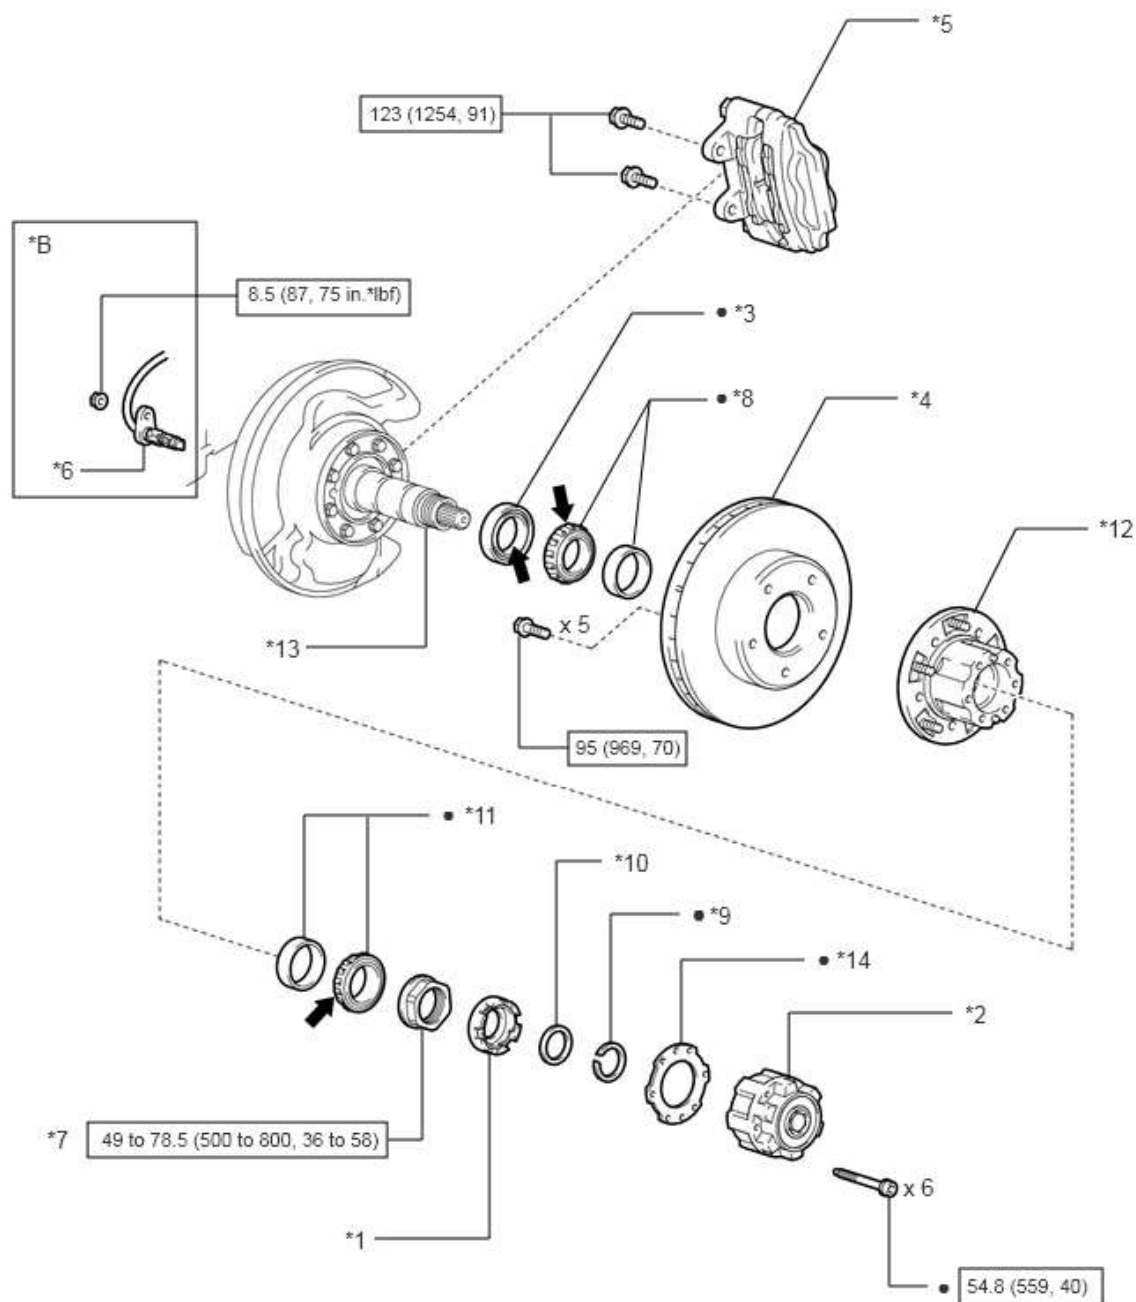

P

*A	w/ Dual Mode Automatic Locking Hub	*B	w/ ABS
*1	BRAKE SET	*2	FREE WHEEL HUB ASSEMBLY
*3	FRONT AXLE HUB OIL SEAL LH	*4	FRONT DISC
*5	FRONT DISC BRAKE CYLINDER ASSEMBLY LH	*6	
*7	FRONT WHEEL ADJUSTING NUT LH	*8	INNER BEARING
*9	FRONT DRIVE SHAFT SNAP RING LH	*10	FRONT DRIVE SHAFT SPACER LH
*11	OUTER BEARING	*12	FRONT AXLE HUB LH
*13	STEERING KNUCKLE SPINDLE SUB-ASSEMBLY	*14	FRONT AXLE OUTER SHAFT FLANGE GASKET LH
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP grease	-	-