

## POWER STEERING FLUID BLEEDING

### 1. CHECK FLUID LEVEL

(See page SR-5)

### 2. JACK UP FRONT OF VEHICLE AND SUPPORT IT WITH STANDS

### 3. TURN STEERING WHEEL

With the engine stopped, turn the wheel slowly from lock to lock several times.

### 4. LOWER VEHICLE

### 5. START ENGINE

Run the engine at idle for a few minutes.

### 6. TURN STEERING WHEEL

(a) With the engine idling, turn the wheel to left or right full lock position and keep it there for 2-3 seconds, then turn the wheel to the opposite full lock position and keep it there for 2-3 seconds.

(b) Repeat (a) several times.

### 7. STOP ENGINE

### 8. CHECK FOR FOAMING OR EMULSIFICATION

If the system has to be bled twice specifically because of foaming or emulsification, check for fluid leaks in the system.

### 9. CHECK FLUID LEVEL

(See page SR-5)

