

HEATED OXYGEN SENSOR HEATED OXYGEN SENSOR INSPECTION


1. INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSOR

Using an ohmmeter, measure the resistance between the terminals +B and HT.

Resistance:

At 20°C (68°F): 5 – 7Ω

If the resistance is not as specified, replace the heated oxygen sensor.

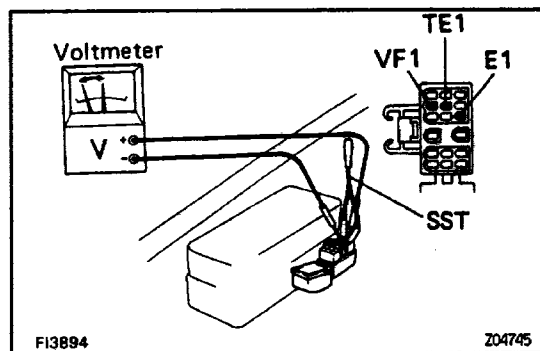


2. INSPECTION OF FEEDBACK VOLTAGE (VF1)

- Warm up the engine.
- Connect the voltmeter to the DLC1 terminals VF1 and E1.

HINT: Use SST when connecting between terminals TE1 and E1 of the DLC1.

SST 09843-18020

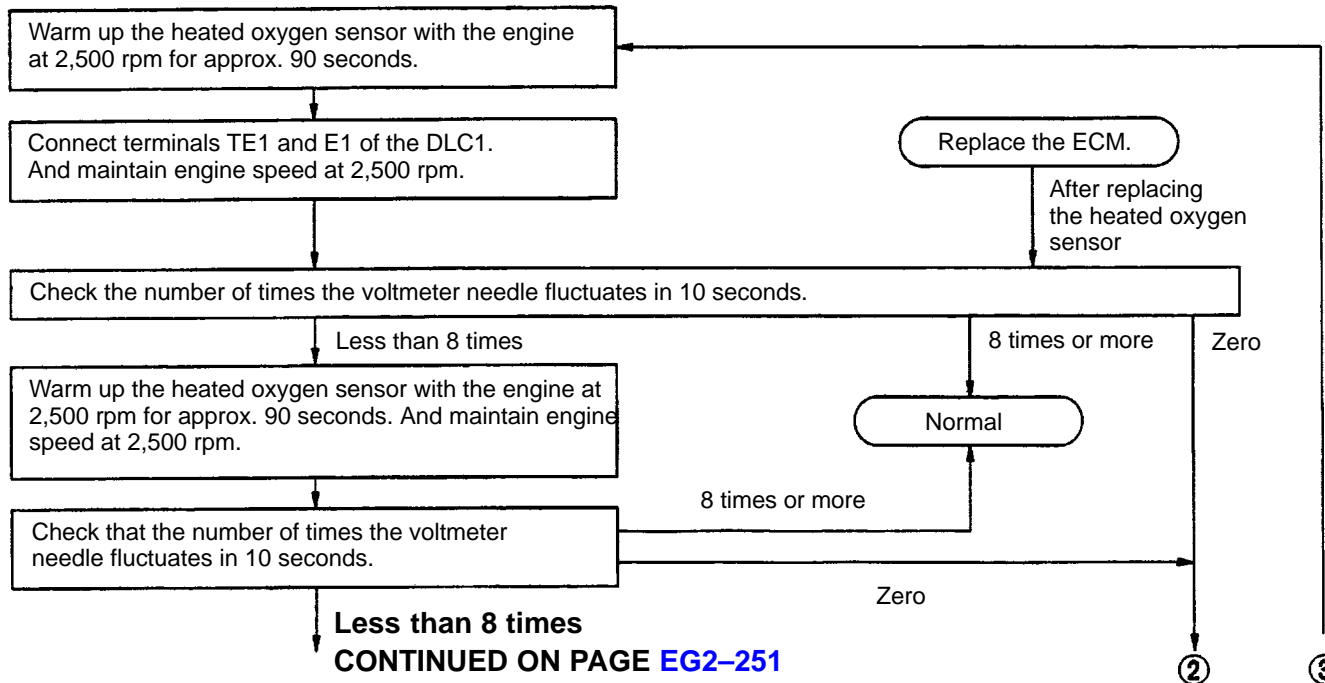

CONTINUED FROM PAGE [EG2-250](#)
