




## AXLE AND DIFFERENTIAL FRONT AXLE HUB COMPONENTS

## ILLUSTRATION

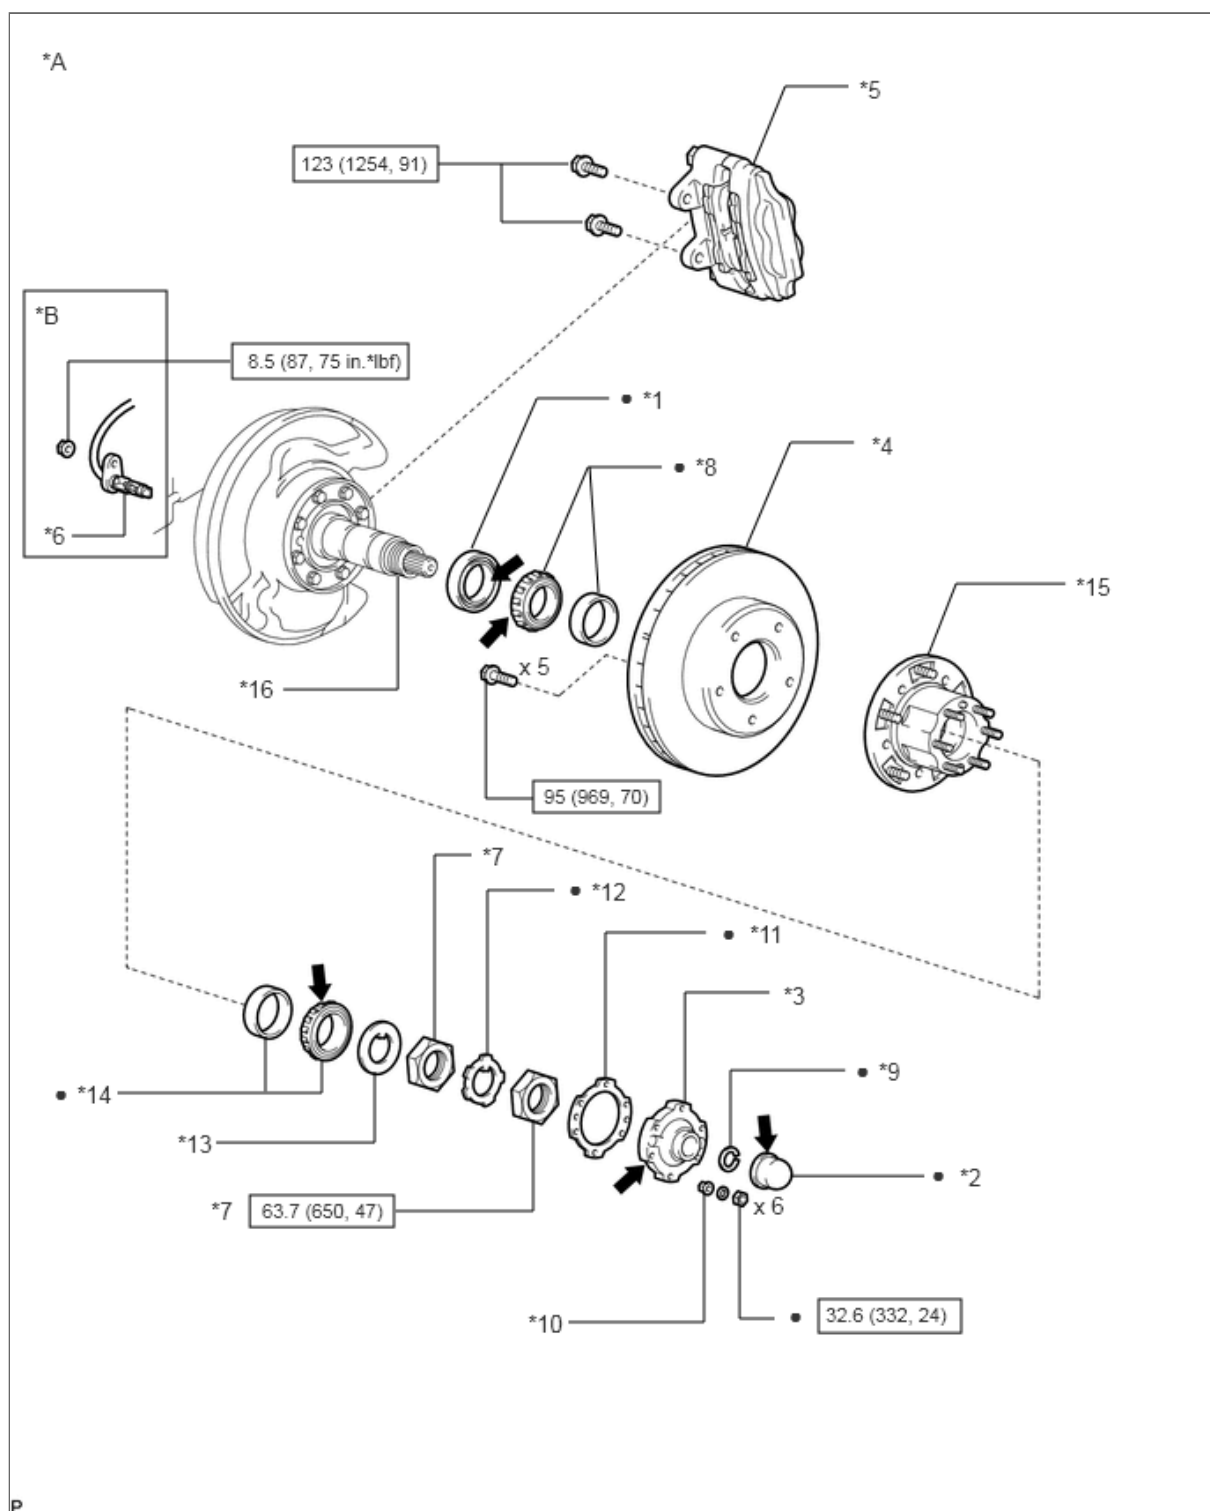




P

*A	w/o Free Wheel Hub	*B	w/ ABS
*1	FRONT AXLE HUB OIL SEAL LH	*2	FRONT AXLE OUTER SHAFT FLANGE CAP
*3	FRONT AXLE OUTER SHAFT FLANGE LH	*4	FRONT DISC
*5	FRONT DISC BRAKE CYLINDER ASSEMBLY LH	*6	
*7	FRONT WHEEL ADJUSTING NUT LH	*8	INNER BEARING
*9	FRONT DRIVE SHAFT SNAP RING LH	*10	FRONT AXLE SHAFT CONE WASHER
*11	FRONT AXLE OUTER SHAFT FLANGE GASKET LH	*12	FRONT WHEEL ADJUSTING LOCK WASHER
*13	FRONT AXLE HUB CLAW WASHER LH	*14	OUTER BEARING

*15	FRONT AXLE HUB LH	*16	STEERING KNUCKLE SPINDLE SUB-ASSEMBLY
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP grease	-	-


## ILLUSTRATION

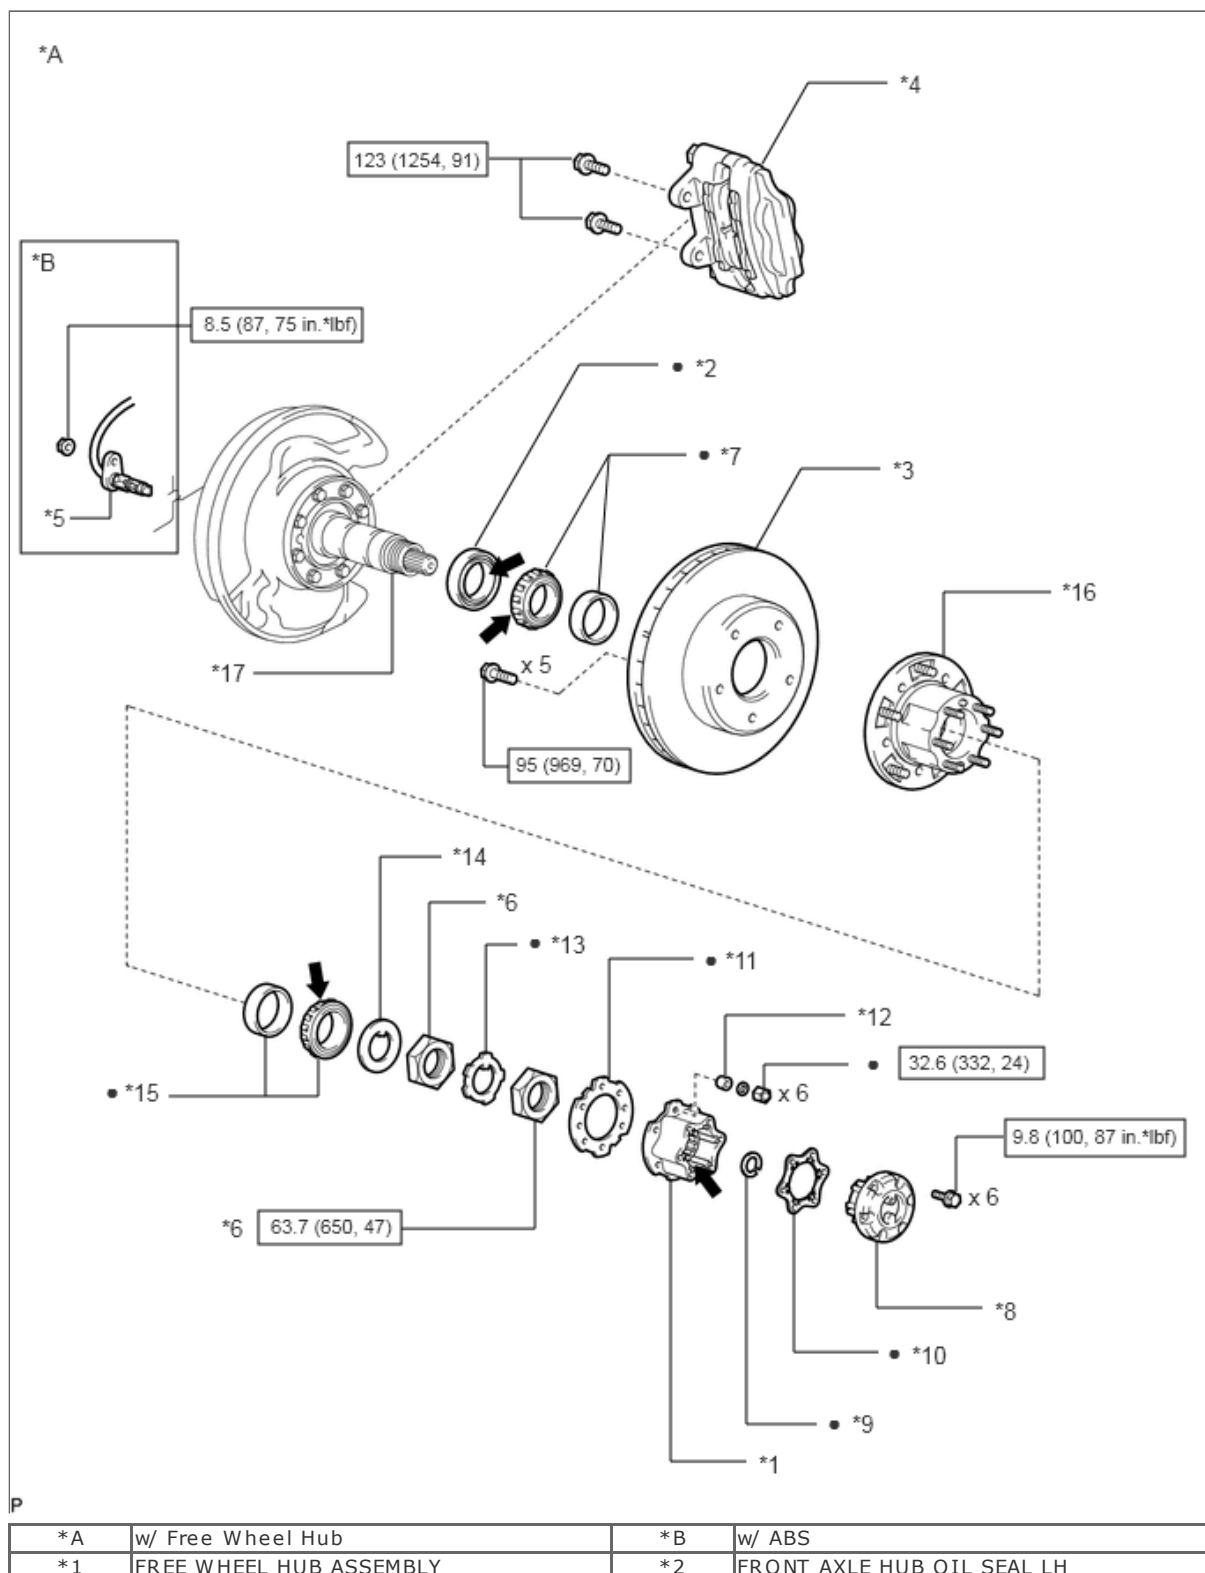

*3	FRONT DISC	*4	FRONT DISC BRAKE CYLINDER ASSEMBLY LH
*5		*6	FRONT WHEEL ADJUSTING NUT LH
*7	INNER BEARING	*8	FREE WHEEL HUB COVER SUB-ASSEMBLY LH
*9	FREE WHEEL HUB RING LH	*10	FREE WHEEL HUB GASKET LH
*11	FRONT AXLE OUTER SHAFT FLANGE GASKET LH	*12	FRONT AXLE SHAFT CONE WASHER
*13	FRONT WHEEL ADJUSTING LOCK WASHER	*14	FRONT AXLE HUB CLAW WASHER LH
*15	OUTER BEARING	*16	FRONT AXLE HUB LH
*17	STEERING KNUCKLE SPINDLE SUB-ASSEMBLY	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP grease	-	-

## ILLUSTRATION

\*A

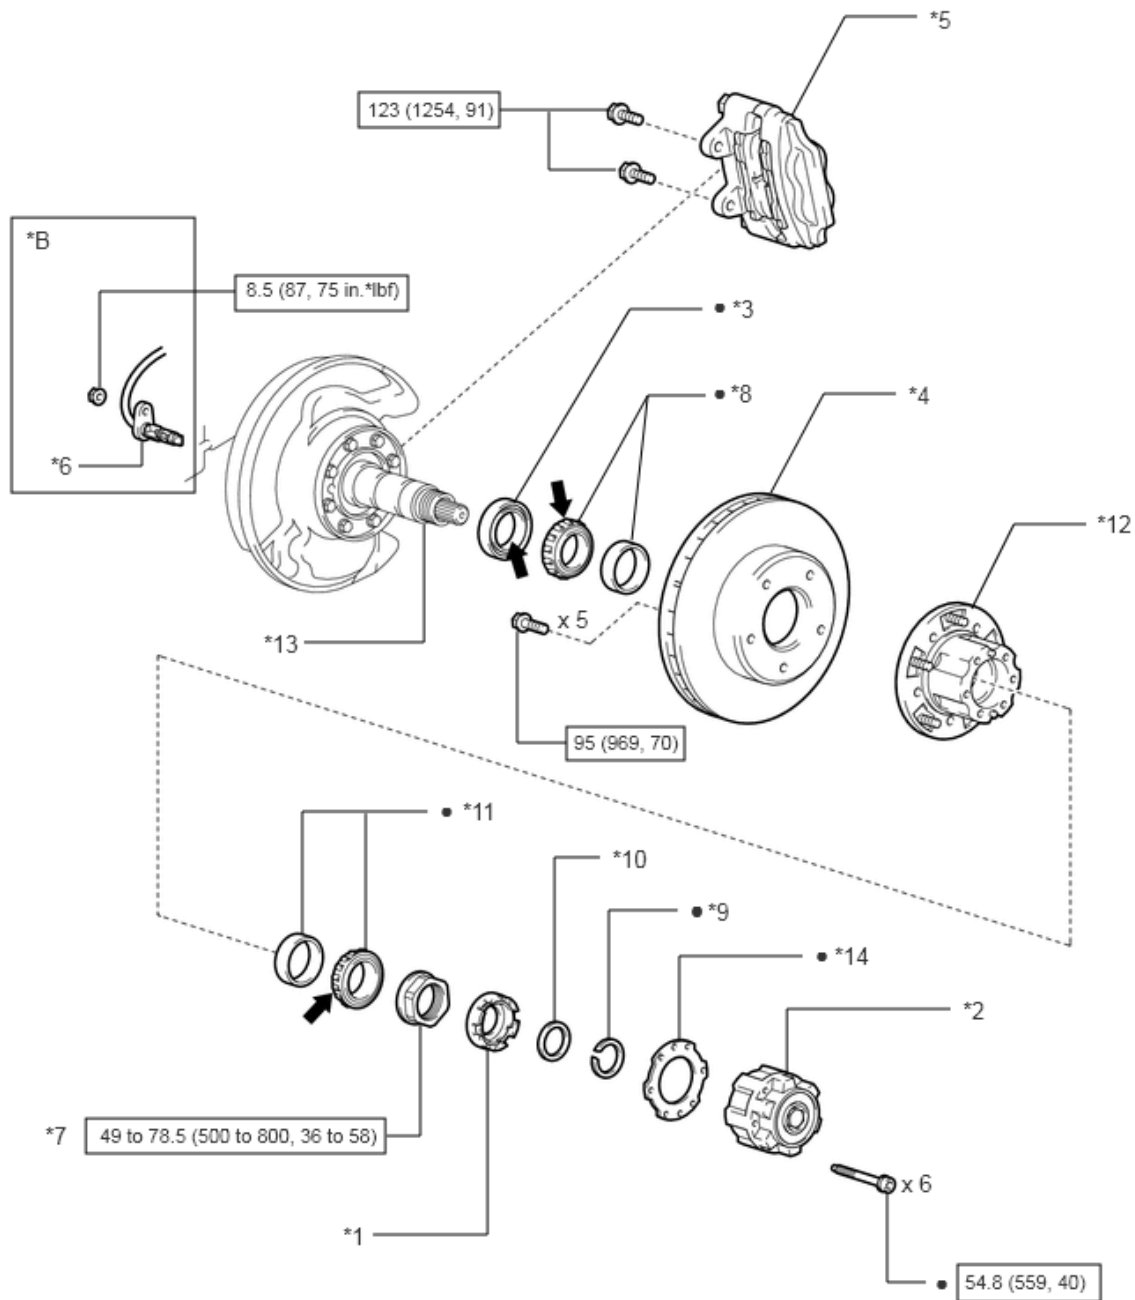

P

*A	w/ Dual Mode Automatic Locking Hub	*B	w/ ABS
*1	BRAKE SET	*2	FREE WHEEL HUB ASSEMBLY
*3	FRONT AXLE HUB OIL SEAL LH	*4	FRONT DISC
*5	FRONT DISC BRAKE CYLINDER ASSEMBLY LH	*6	
*7	FRONT WHEEL ADJUSTING NUT LH	*8	INNER BEARING
*9	FRONT DRIVE SHAFT SNAP RING LH	*10	FRONT DRIVE SHAFT SPACER LH
*11	OUTER BEARING	*12	FRONT AXLE HUB LH
*13	STEERING KNUCKLE SPINDLE SUB-ASSEMBLY	*14	FRONT AXLE OUTER SHAFT FLANGE GASKET LH
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP grease	-	-

