
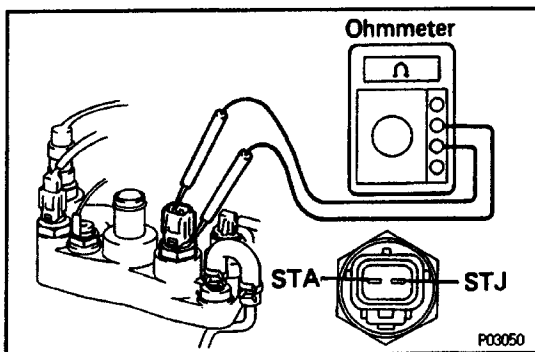


COLD START INJECTOR TIME SWITCH

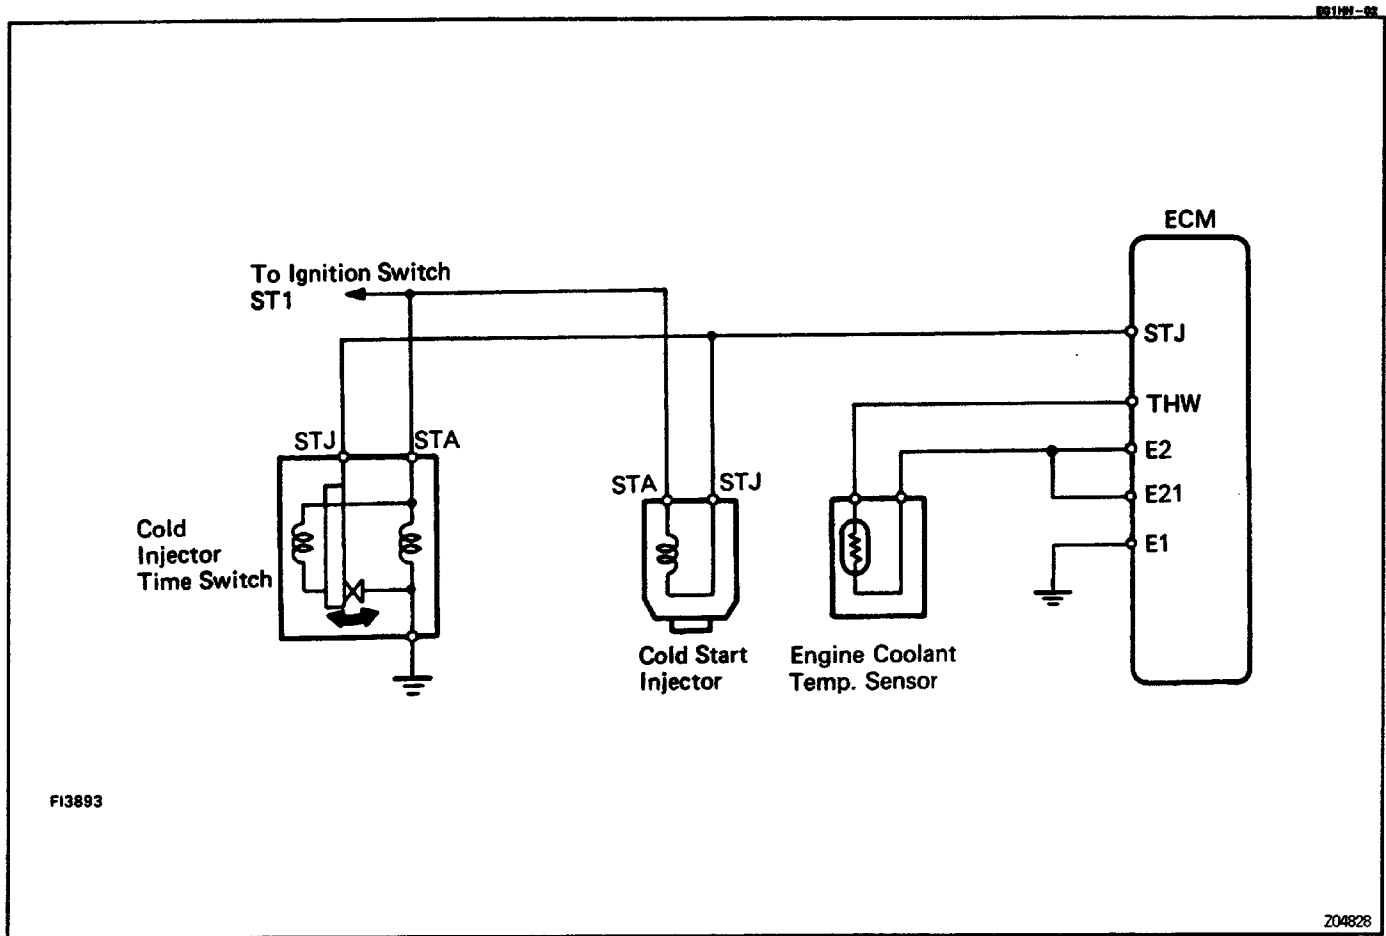

COLD START INJECTOR TIME SWITCH INSPECTION

MEASURE RESISTANCE OF COLD START INJECTOR TIME SWITCH

- Disconnect the connector.
- Using an ohmmeter, measure the resistance between terminals.

| Between terminals | Resistance (Ω) | Engine coolant temperature |
|-------------------|-------------------------|----------------------------|
| STA - STJ | 30 - 50 | Below 10°C (50°F) |
| STA - STJ | 70 - 90 | Above 25°C (77°F) |
| STA - Ground | 30 - 90 | - |

If the resistance is not as specified, replace the switch.

- Reconnect the connector.