

3-х контактный, черный (датчик скорости VSS)				
№ контакта	Сигнал	цвет провода	куда идет и № контакта	примечание
1	+12	черн-розов	IGN	
2	GND	синий	корпус	
3	SP1	зелен-красн	спидометр S (D1)	

power = 1
ground = 2
signal = 3

2. INSPECT VEHICLE SPEED SENSOR OPERATION


- Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2.
- Connect the positive (+) lead from the tester to terminal 3 and the negative (-) lead to terminal 2.
- Rotate the shaft.
- Check that there is voltage change from approx. 0 V to 11 V or more between terminals 2 and 3.

HINT:


The voltage change should be performed 4 times for every revolution of the speed sensor shaft.

If operation is not as specified, replace the sensor.

4WD:

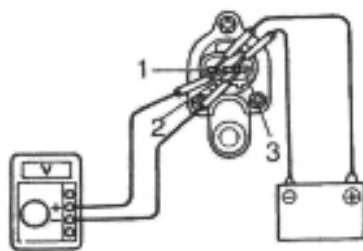

2WD M/T:

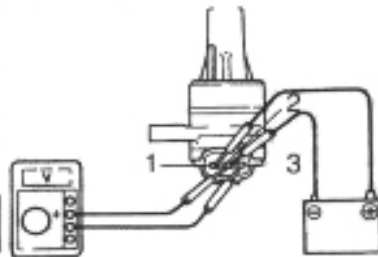

2WD A/T:

