


POWER SOURCE

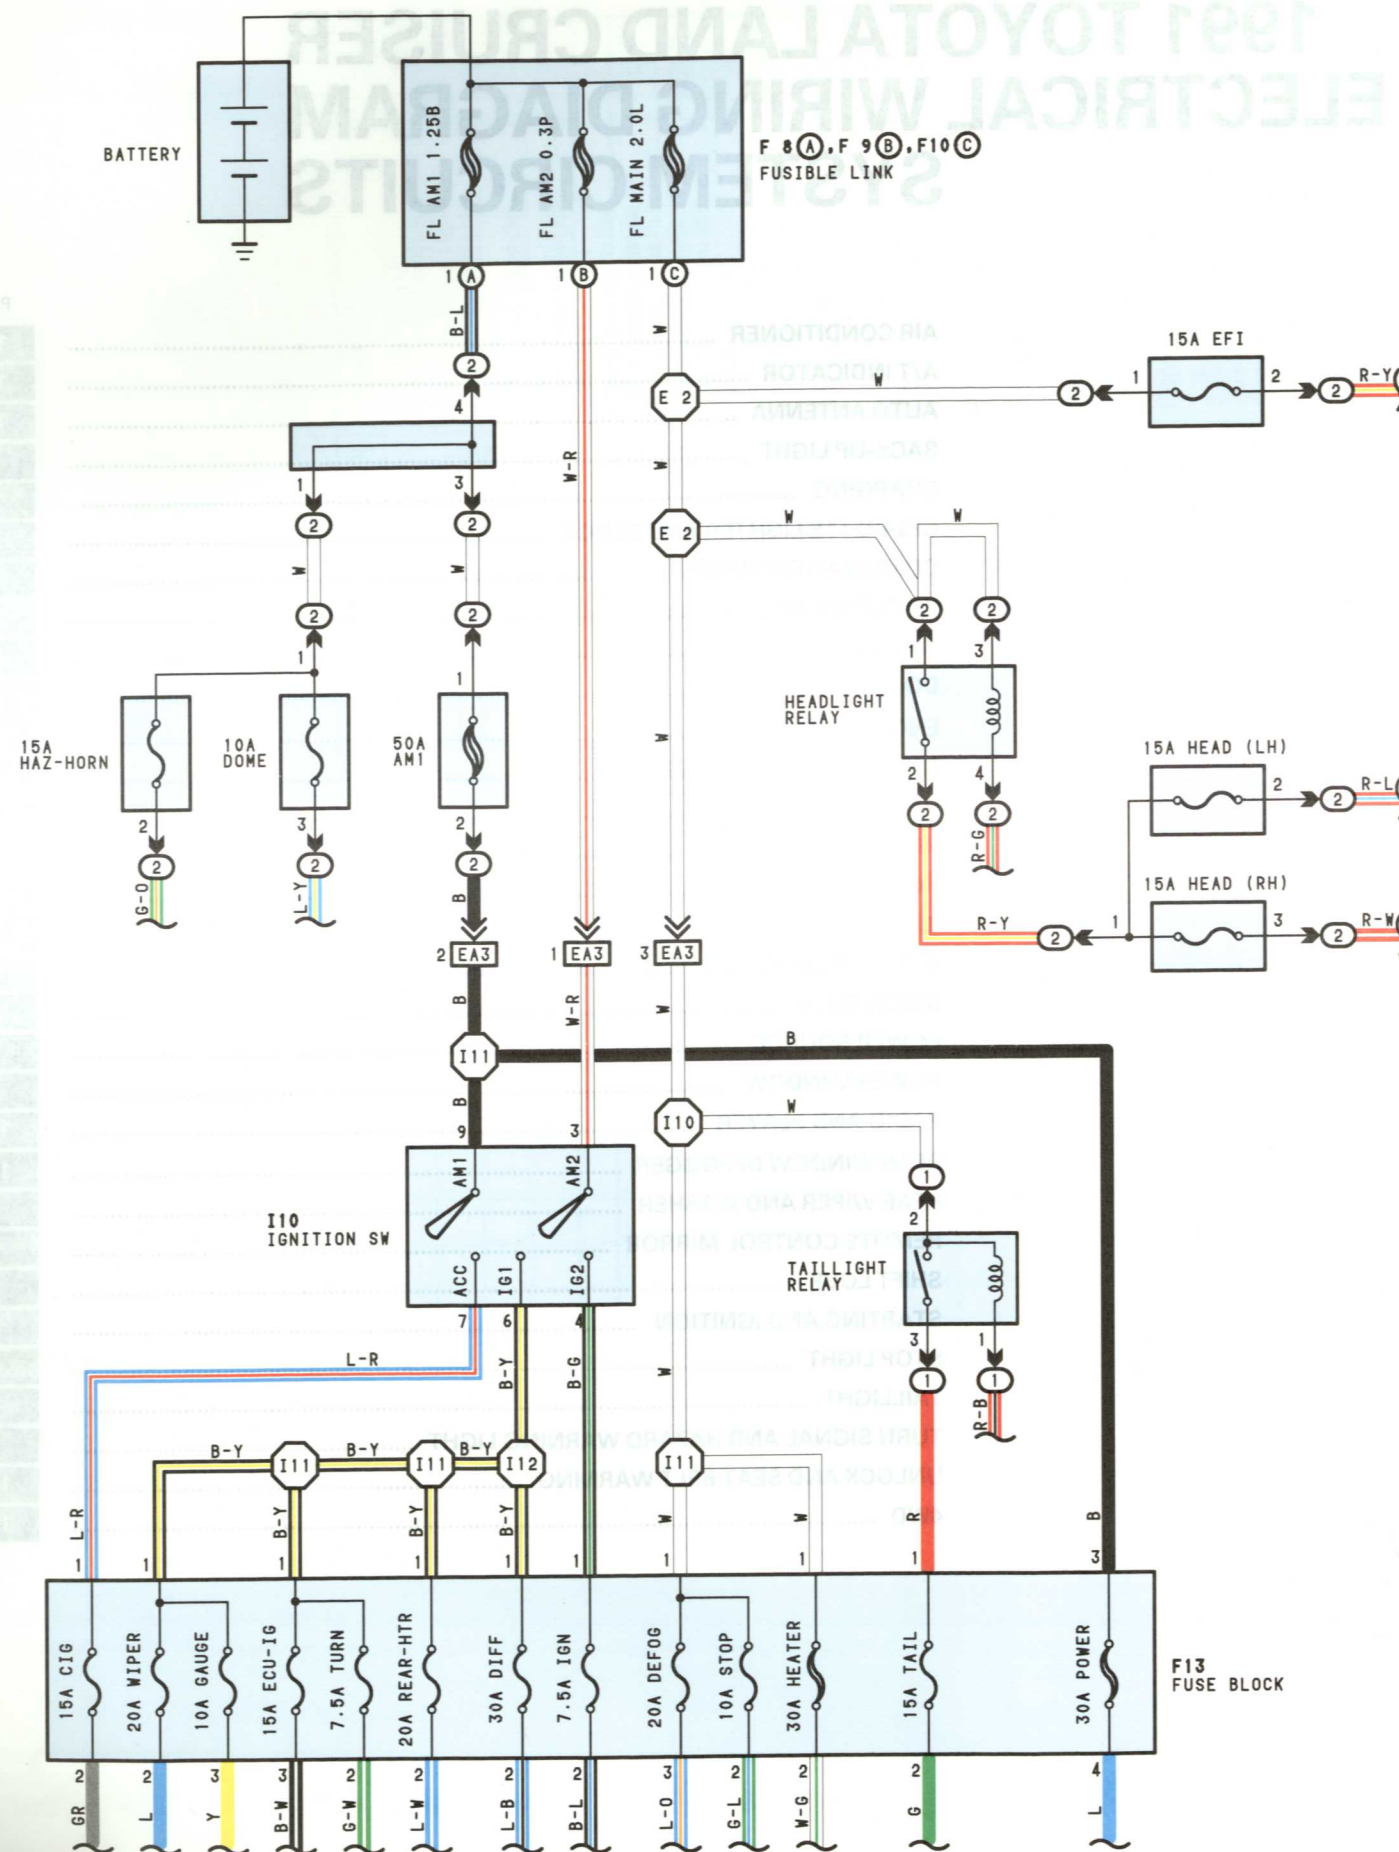

SERVICE HINTS

HEADLIGHT RELAY

② 1- ② 2: CLOSED WITH LIGHT CONTROL SW AT HEAD POSITION OR DIMMER SW AT FLASH POSITION

I11 IGNITION SW

9-7: CLOSED WITH IGNITION KEY AT ACC OR ON POSITION

9-6: CLOSED WITH IGNITION KEY AT ON OR ST POSITION

3-4: CLOSED WITH IGNITION KEY AT ON OR ST POSITION

TAILLIGHT RELAY

① 2- ① 3: CLOSED WITH LIGHT CONTROL SW AT TAIL OR HEAD POSITION

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F 8	A	19	F 10	C	19
F 9	B	19	F 13	20	
				I10	20

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	18	R/B NO.1 (LEFT KICK PANEL)
2	16	R/B NO.2 (FRONT SIDE OF LEFT FENDER)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	22	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	22	ENGINE ROOM MAIN WIRE	I11	24	COWL WIRE
I10	24	COWL WIRE	I12		


F 8 (A), F 9 (B), F 10 (C)

F 13

I10 BLACK



(SEE PAGE 18)

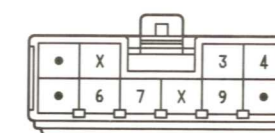





STARTING AND IGNITION

SERVICE HINTS

I10 IGNITION SW

9-10: CLOSED WITH IGNITION SW AT ST POSITION
3- 4: CLOSED WITH IGNITION SW AT ON OR ST POSITION

STARTER

POINTS CLOSED WITH CLUTCH START SW ON AND IGNITION SW AT ST POSITION

N 1 NEUTRAL START SW

1- 2: CLOSED WITH A/T SHIFT LEVER IN P OR N POSITION

C 2 COLD START INJECTOR

1-2: APPROX. 12VOLTS WHILE START INJECTOR TIME SW IS CLOSED AND STARTER CRANKING

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 1	19	F 9 A	19	N 2	19
C 2	19	I 2	19	S 2 A	19
D 1	19	I 3	19	S 3 B	19
E 4	20	I10	20	S 4	19
F 8 B	19	N 1	19		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	16	R/B NO.2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	22	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
IH1	24	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	22	AIR INTAKE CHAMBER


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 6			I 7	24	COWL WIRE
E 7	22	ENGINE WIRE	I14	24	ENGINE WIRE
E 8					
E12	22	COWL WIRE			

C 1 DARK GRAY

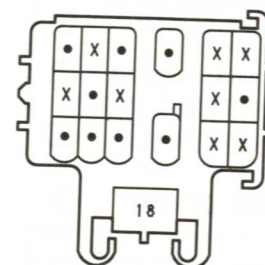


C 2 BLACK

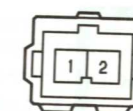

D 1 DARK GRAY



E 4 DARK GRAY

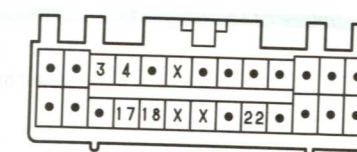

F 8 (B), F 9 (A)




I 2 BLACK



I 3 BLACK



I10 GRAY

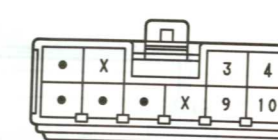

N 1 GRAY



N 2



S 2 (A)



S 3 (B) GRAY



S 4 BLACK





A 6 (B) ALTERNATOR

- : PARTS LOCATION


○ : RELAY BLOCKS

☐ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS




 : GROUND POINTS

 : SPLICE POINTS

A 5 (A)



1

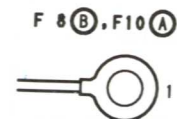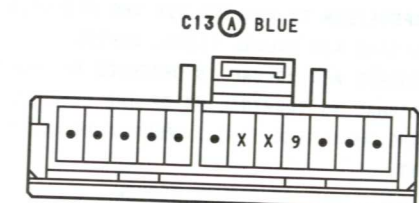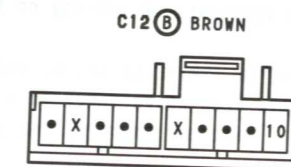

F13

(SEE PAGE 18)



SYSTEM OUTLINE

THE TCCS SYSTEM UTILIZES A MICROCOMPUTER AND MAINTAINS OVERALL CONTROL OF THE E/G, T/M, ETC. AN OUTLINE OF ENGINE CONTROL IS GIVEN HERE.

1. INPUT SIGNALS

- (1) WATER TEMP. SIGNAL SYSTEM
THE WATER TEMP. SENSOR DETECTS THE E/G COOLANT TEMP. AND HAS A BUILT-IN THERMISTOR WITH A RESISTANCE WHICH VARIES ACCORDING TO THE WATER TEMP. THUS THE WATER TEMP. IS INPUT IN THE FORM OF A CONTROL SIGNAL TO TERMINAL THW OF THE TCCS ECU.
- (2) INTAKE AIR TEMP. SIGNAL SYSTEM
THE INTAKE AIR TEMP. SENSOR IS INSTALLED INSIDE THE AIR FLOW METER AND DETECTS THE INTAKE AIR TEMP., WHICH IS INPUT AS A CONTROL SIGNAL TO TERMINAL THA OF THE ECU.
- (3) OX SENSOR SIGNAL SYSTEM
THE OXYGEN DENSITY IN THE EXHAUST EMISSIONS IS DETECTED AND INPUT AS A CONTROL SIGNAL TO TERMINAL OX1 OF THE ECU. TO MAINTAIN STABLE DETECTION PERFORMANCE BY THE OX SENSOR, A HEATER IS USED FOR WARMING THE SENSOR. THE HEATER IS ALSO CONTROLLED BY THE ECU (HT1).
- (4) RPM SIGNAL SYSTEM
CRANKSHAFT POSITION AND E/G RPM ARE DETECTED BY THE PICK-UP COIL INSTALLED INSIDE THE DISTRIBUTOR. CRANKSHAFT POSITION IS INPUT AS A CONTROL SIGNAL TO TERMINAL G1 OF THE ECU, AND RPM IS INPUT TO TERMINAL NE.
- (5) THROTTLE SIGNAL SYSTEM
THE THROTTLE POSITION SENSOR DETECTS THE THROTTLE VALVE OPENING ANGLE, WHICH IS INPUT AS A CONTROL SIGNAL TO TERMINAL VTA OF THE ECU, OR WHEN THE VALVE IS FULLY CLOSED, TO TERMINAL IDL.
- (6) VEHICLE SPEED SIGNAL SYSTEM
THE SPEED SENSOR, INSTALLED INSIDE THE COMBINATION METER, DETECTS THE VEHICLE SPEED AND INPUTS A CONTROL SIGNAL TO TERMINAL SPD OF THE ECU.
- (7) A/C SW SIGNAL SYSTEM
THE OPERATING VOLTAGE OF THE A/C MAGNET CLUTCH IS DETECTED AND INPUT IN THE FORM OF A CONTROL SIGNAL TO TERMINAL A/C OF THE ECU.
- (8) BATTERY SIGNAL SYSTEM
VOLTAGE IS CONSTANTLY APPLIED TO TERMINAL BATT OF THE ECU. WHEN THE IGNITION SW IS TURNED TO ON, VOLTAGE FOR ECU OPERATION IS APPLIED VIA THE EFI MAIN RELAY TO TERMINALS +B AND +B1 OF THE ECU.
- (9) INTAKE AIR VOLUME SIGNAL SYSTEM
INTAKE AIR VOLUME IS DETECTED BY THE POTENTIOMETER INSTALLED INSIDE THE AIR FLOW METER AND IS INPUT AS A CONTROL SIGNAL TO TERMINAL VS OF THE ECU. INSIDE THE AIR FLOW METER THERE IS ALSO A SW FOR FUEL PUMP OPERATION, AND WHEN THE MEASURING PLATE OPENS (AIR INTAKE OCCURS), THIS SW TURNS ON AND CURRENT FLOWS TO THE FUEL PUMP TO OPERATE IT.
- (10) STOP LIGHT SW SIGNAL SYSTEM
THE STOP LIGHT SW IS USED TO DETECT WHETHER OR NOT THE VEHICLE IS BRAKING AND THE INFORMATION IS INPUT AS A CONTROL SIGNAL TO TERMINAL STP OF THE ECU.
- (11) STA SIGNAL SYSTEM
TO CONFIRM THAT THE E/G IS CRANKING, THE VOLTAGE APPLIED TO THE STARTER MOTOR DURING CRANKING IS DETECTED AND IS INPUT AS A CONTROL SIGNAL TO TERMINAL STA OF THE ECU.
- (12) 4WD SIGNAL SYSTEM
WHETHER OR NOT THE VEHICLE IS OPERATING IN 4WD MODE IS DETERMINED, AND A CONTROL SIGNAL IS INPUT TO TERMINAL 4WD OF THE ECU.

2. CONTROL SYSTEM

- EFI (ELECTRONIC FUEL INJECTION) SYSTEM
THE EFI SYSTEM MONITORS THE ENGINE REVOLUTIONS THROUGH THE SIGNALS EACH SENSOR (INPUT SIGNALS (1) TO (12)) INPUTS TO THE ECU. BASED ON THIS DATA AND THE PROGRAM MEMORIZED IN THE ECU, THE MOST APPROPRIATE FUEL INJECTION TIMING IS DECIDED AND CURRENT IS OUTPUT TO TERMINAL #10 AND #20 OF THE ECU, CAUSING THE INJECTORS TO OPERATE IT (TO INJECT FUEL). IT IS THIS SYSTEM WHICH, THROUGH THE WORK OF THE ECU, FINELY CONTROLS FUEL INJECTION IN RESPONSE TO DRIVING CONDITIONS.
- ESA (ELECTRONIC SPARK ADVANCE) SYSTEM
THE ESA SYSTEM MONITORS THE ENGINE REVOLUTIONS USING THE SIGNALS (INPUT SIGNALS (1,4,5 TO 7,9,11,12)) INPUT TO THE ECU FROM EACH SENSOR. BASED ON THIS DATA AND THE PROGRAM MEMORIZED IN THE ECU, THE MOST APPROPRIATE IGNITION TIMING IS DECIDED AND CURRENT IS OUTPUT TO TERMINAL IGT OF THE ECU. THIS OUTPUT CONTROLS THE IGNITER TO PRODUCE THE MOST APPROPRIATE IGNITION TIMING FOR THE DRIVING CONDITIONS.

• FUEL PRESSURE CONTROL SYSTEM

THE FUEL PRESSURE UP SYSTEM CAUSES THE VSV (FOR FUEL PRESSURE UP) TO COME ON FOR HIGH TEMP. STARTS AND IMMEDIATELY AFTER STARTING IN ORDER TO INCREASE THE FUEL PRESSURE, IMPROVE STARTABILITY AT HIGH TEMPERATURES AND PROVIDE STABLE IDLING. THE ECU EVALUATES THE INPUT SIGNALS FROM EACH SENSOR (1,2, AND 4), OUTPUTS CURRENT TO TERMINAL FPU AND CONTROLS THE VSV.

• OX SENSOR HEATER CONTROL SYSTEM

THE OX SENSOR HEATER CONTROL SYSTEM TURNS THE HEATER TO ON WHEN THE INTAKE AIR VOLUME IS LOW (TEMP. OF EXHAUST EMISSIONS LOW), AND WARMS UP THE OX SENSOR TO IMPROVE DETECTION PERFORMANCE OF THE SENSOR. THE ECU EVALUATES THE SIGNALS FROM EACH SENSOR (INPUT SIGNALS (1,4,8,9,11)), CURRENT IS OUTPUT TO TERMINAL HT1 AND CONTROLS THE HEATER.

• AI (AIR INJECTION) CONTROL SYSTEM

THE AI CONTROL SYSTEM TURNS ON THE VSV (FOR AI) IN ACCORDANCE WITH THE ENGINE COOLANT TEMPERATURE AND THE DRIVING CONDITIONS IN ORDER TO REDUCE HC AND CO EMISSIONS.

• EGR CUT CONTROL SYSTEM

THE EGR CUT CONTROL SYSTEM CONTROLS THE VSV (FOR EGR) BY EVALUATING THE SIGNALS FROM EACH SENSOR INPUT TO THE ECU (INPUT SIGNALS (1,9)) AND BY SENDING OUTPUT TO TERMINAL EGR OF THE ECU.



3. DIAGNOSIS SYSTEM

WITH THE DIAGNOSIS SYSTEM, WHEN THERE IS A MALFUNCTION IN THE ECU SIGNAL SYSTEM, THE MALFUNCTIONING SYSTEM IS RECORDED IN THE MEMORY. THE MALFUNCTIONING SYSTEM CAN THEN BE FOUND BY READING THE DISPLAY (CODE) OF THE CHECK ENGINE WARNING LIGHT.

4. FAIL-SAFE SYSTEM



WHEN A MALFUNCTION OCCURS IN ANY SYSTEM, IF THERE IS A POSSIBILITY OF ENGINE TROUBLE BEING CAUSED BY CONTINUED CONTROL BASED ON THE SIGNALS FROM THAT SYSTEM, THE FAIL-SAFE SYSTEM EITHER CONTROLS THE SYSTEM BY USING DATA (STANDARD VALUES) RECORDED IN THE ECU MEMORY OR ELSE STOPS THE ENGINE.

ENGINE CONTROL

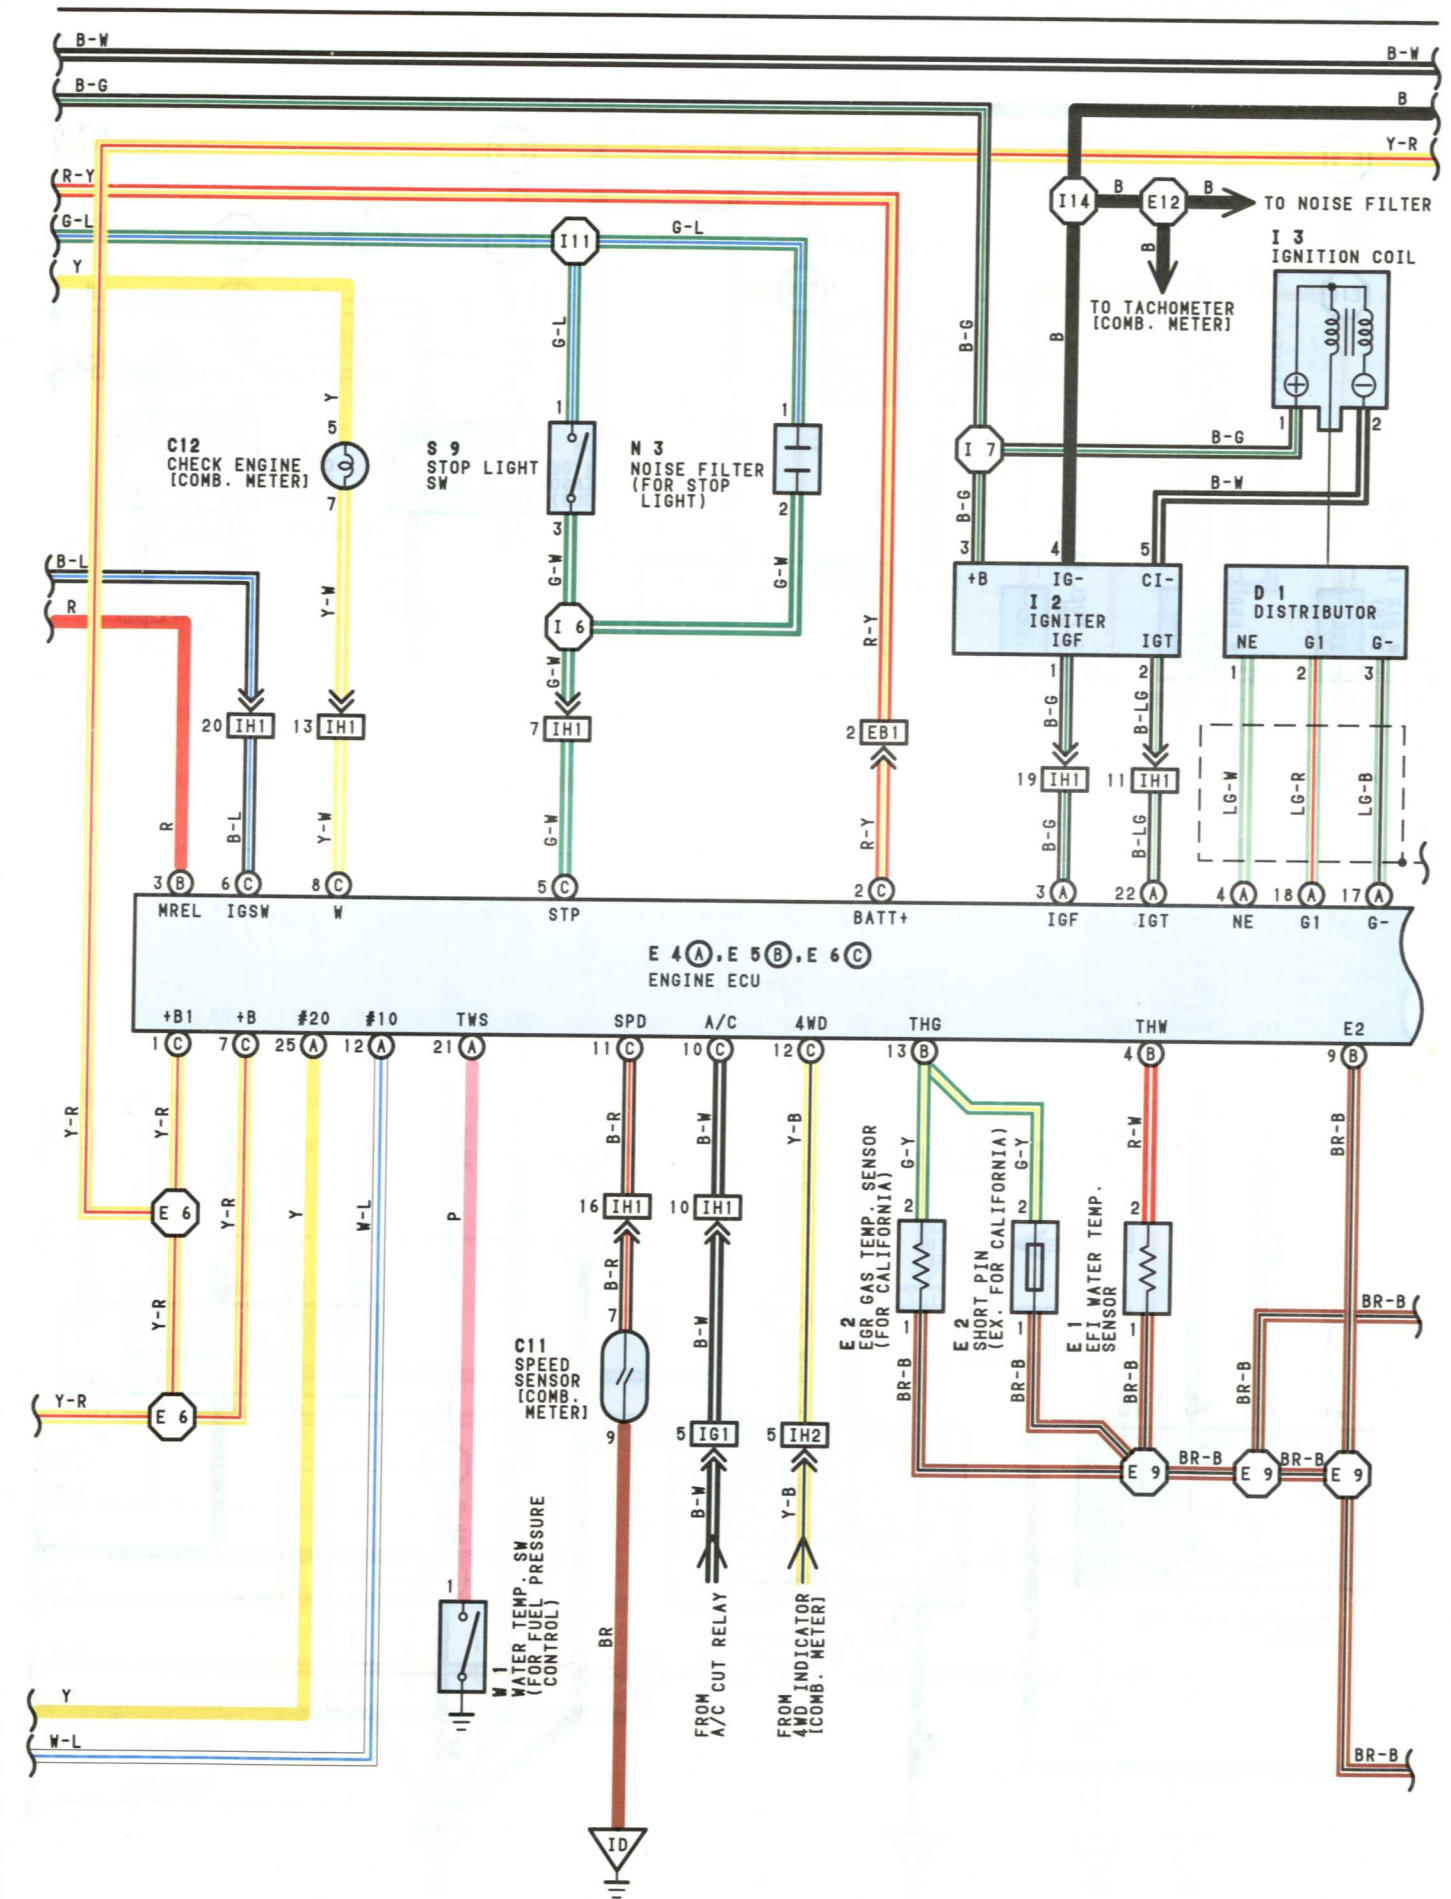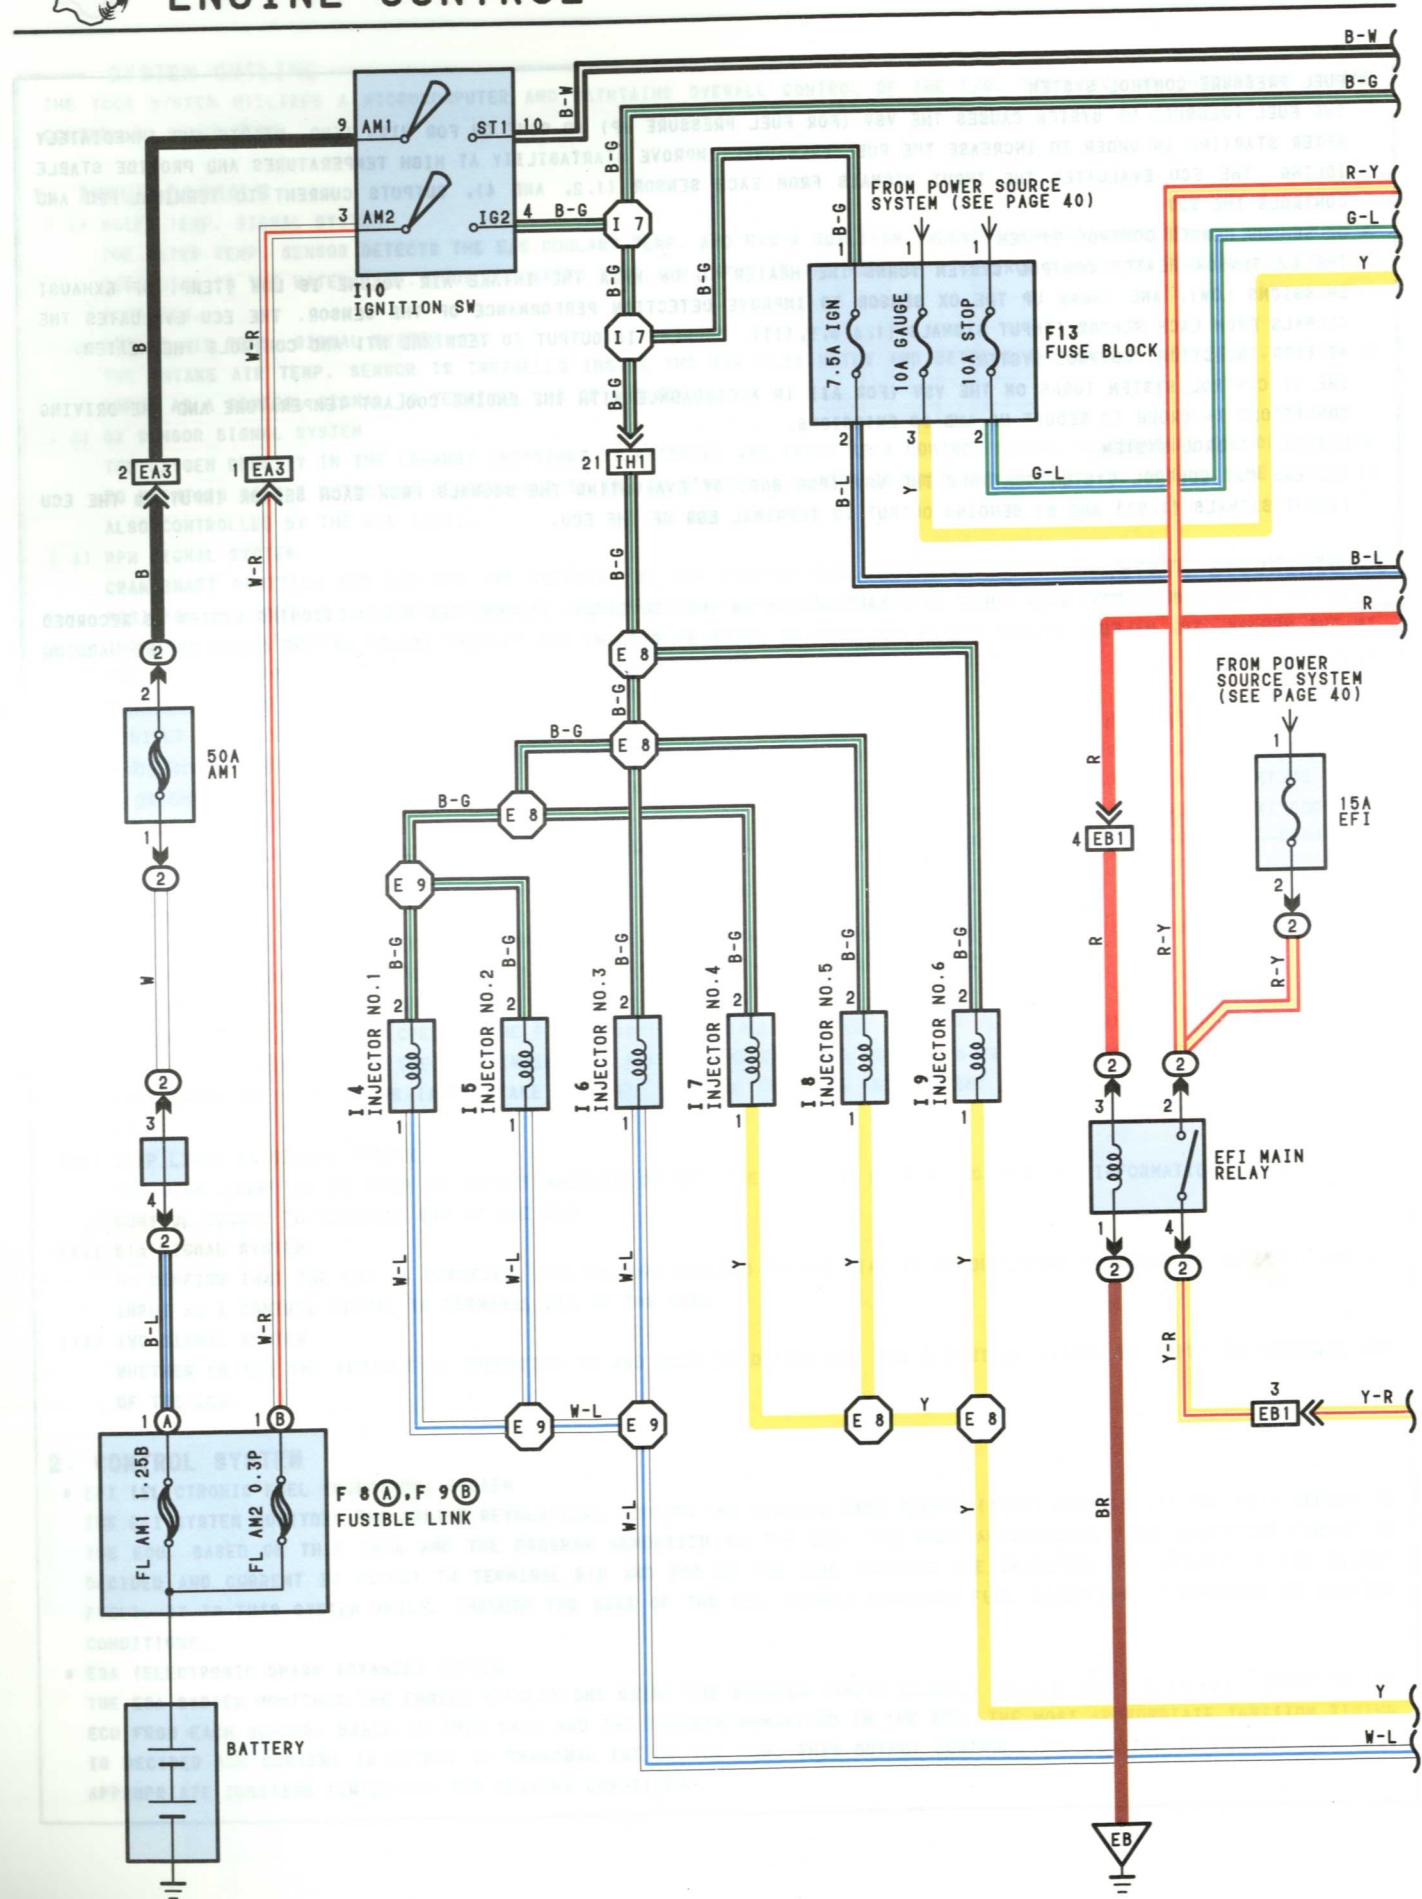



ENGINE CONTROL

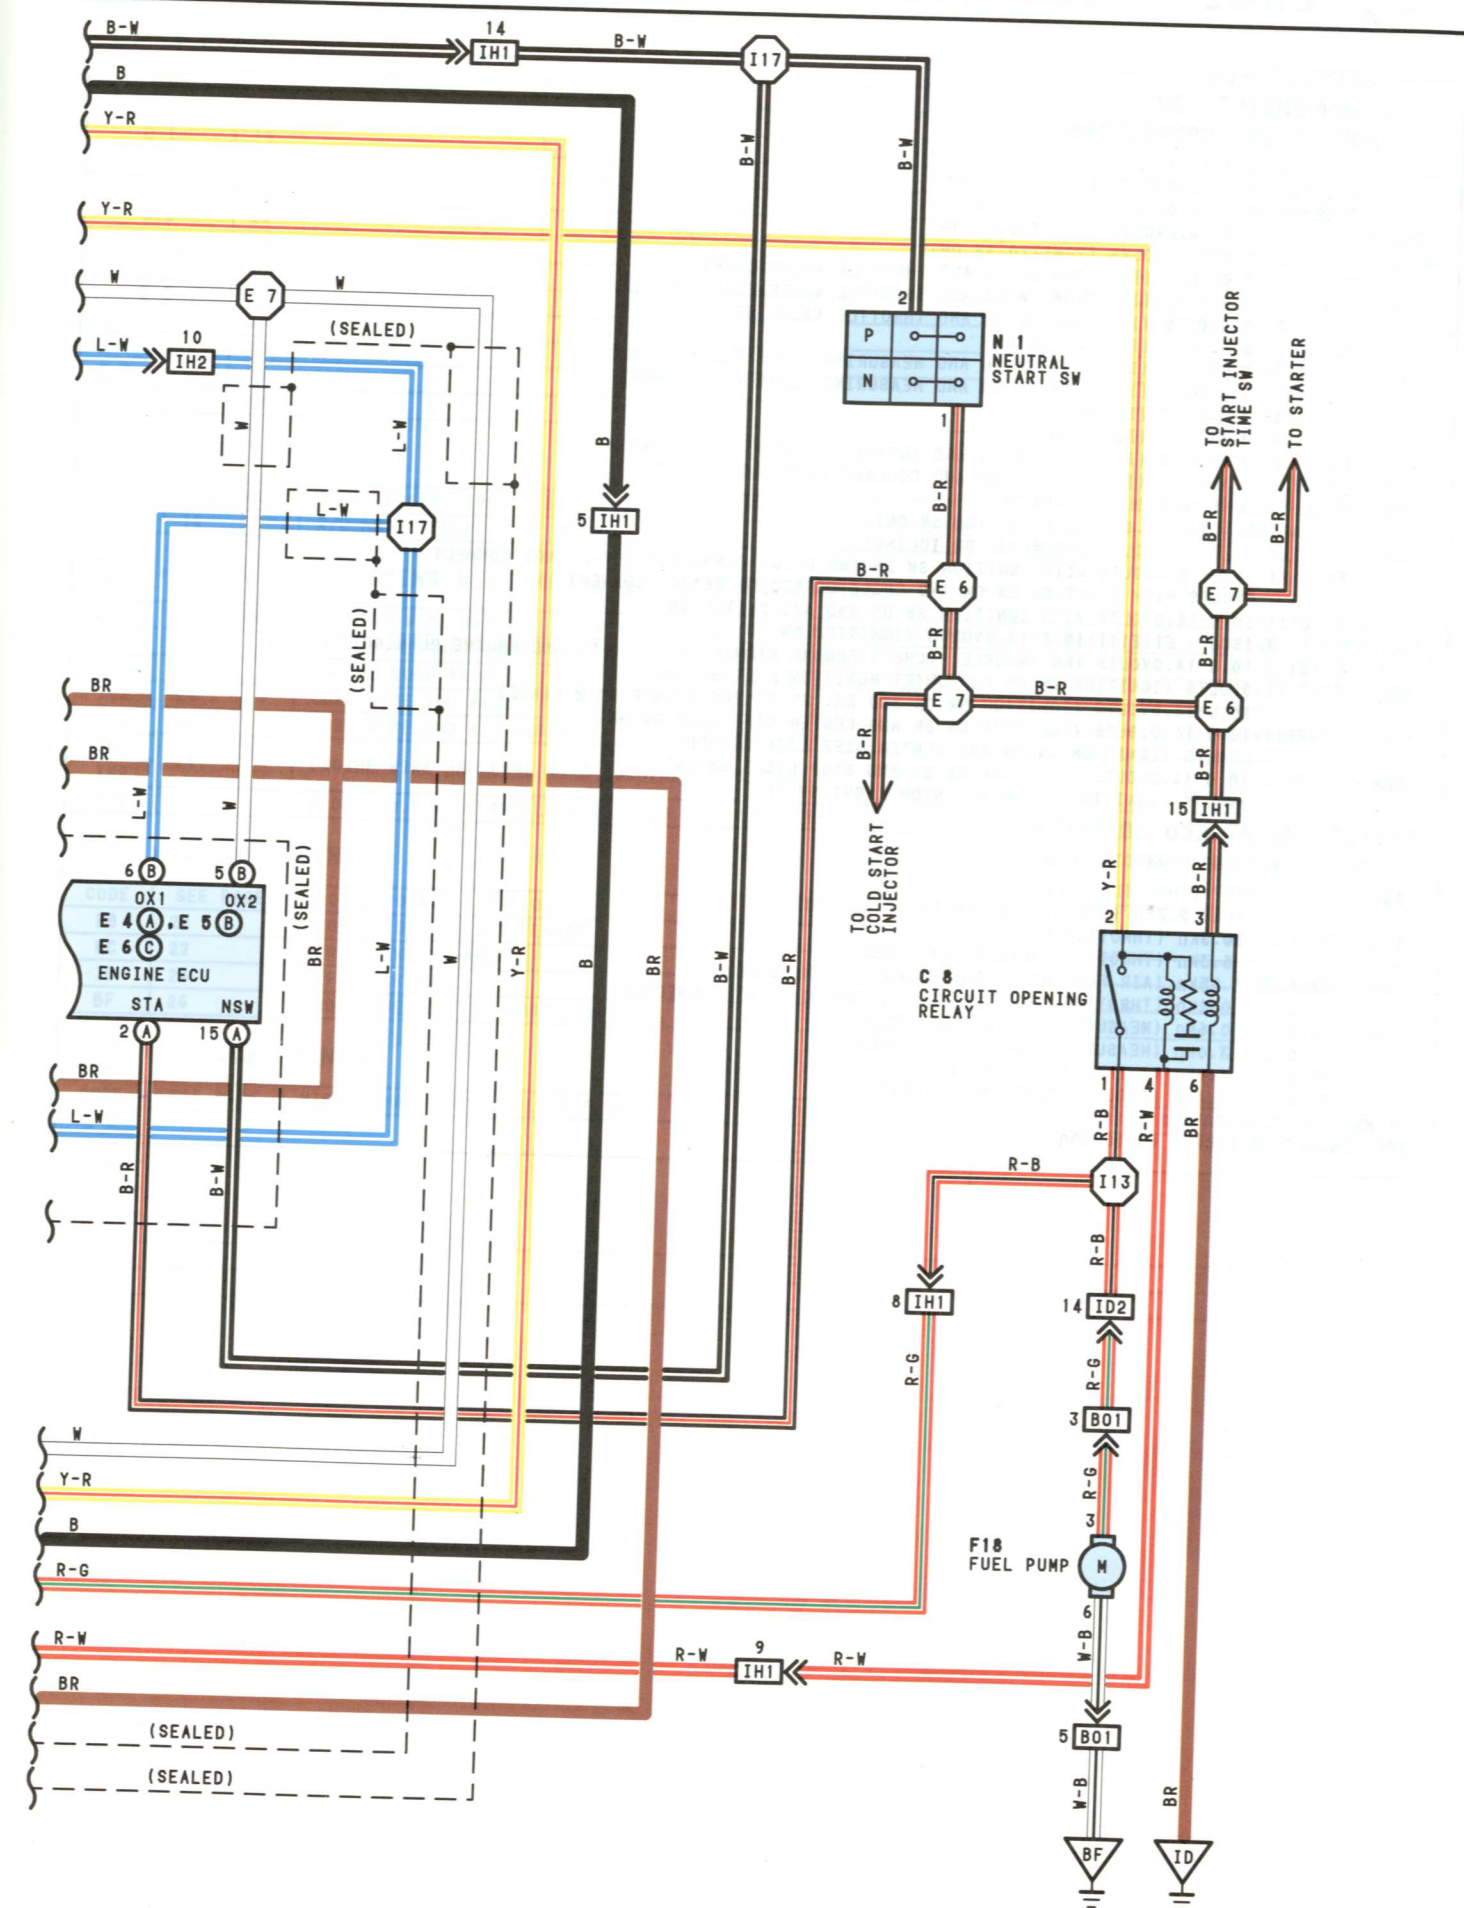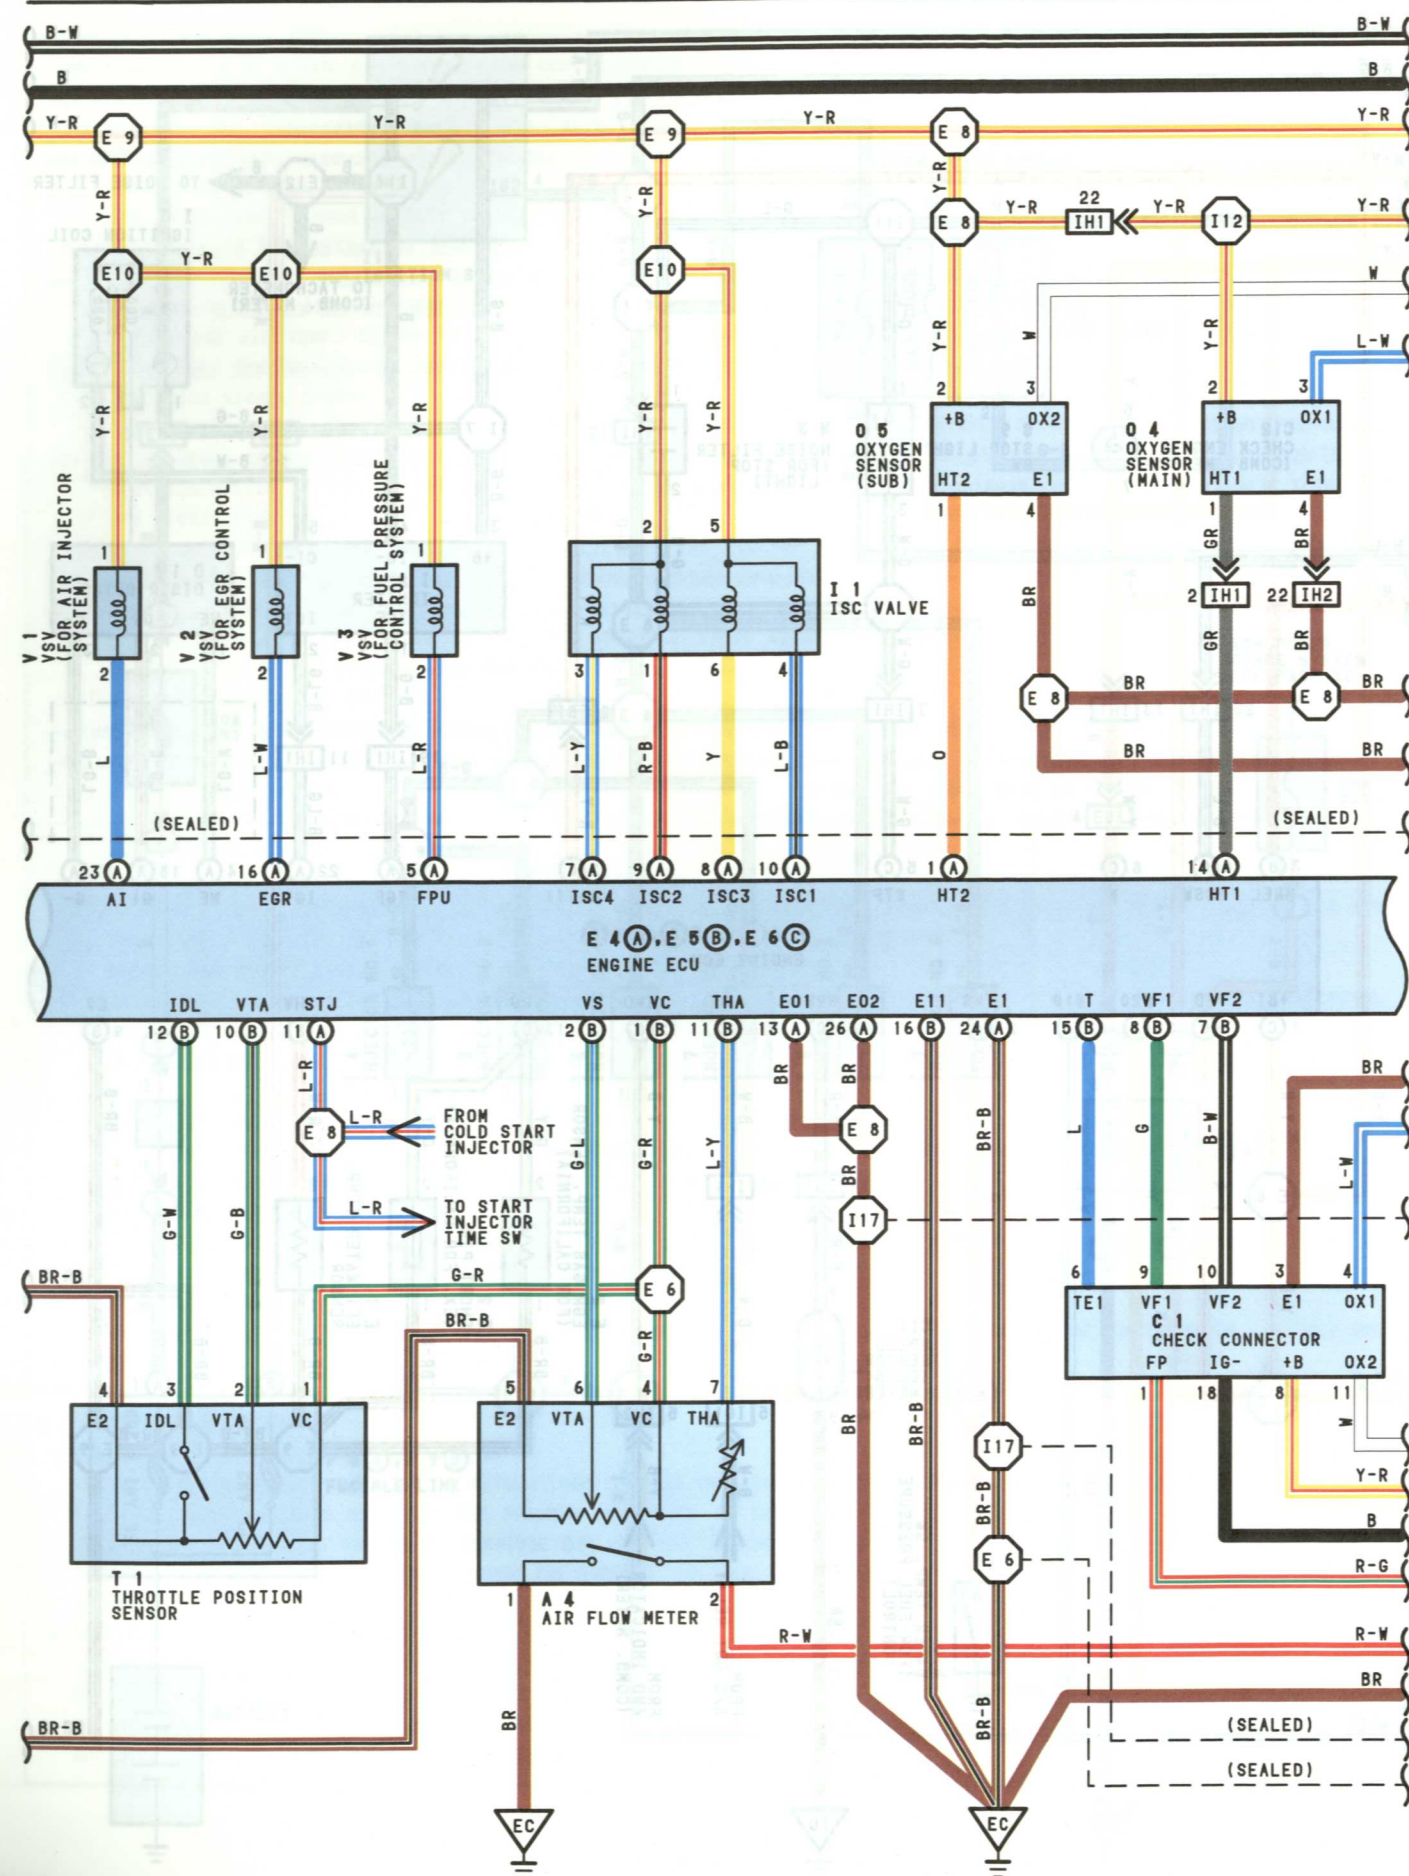



ENGINE CONTROL

SERVICE HINT

E 4, E 5, E 6 ENGINE ECU

VOLTAGE AT ECU CONNECTORS

BATT - E1(E11):10.0-14.0VOLTS
+B - E1(E11):10.0-14.0VOLTS (IGNITIO SW ON)
+B1 - E1(E11):10.0-14.0VOLTS (IGNITIO SW ON)
IGSW - E1(E11):10.0-14.0VOLTS (IGNITIO SW ON)
MREL - E1(E11):10.0-14.0VOLTS (IGNITIO SW ON)
IDL - E2: 4.0- 6.0VOLTS (IGNITION SW ON AND THROTTLE VALVE OPEN)
VTA - E2: 0.1- 1.0VOLTS (IGNITION SW ON AND THROTTLE VALVE FULLY CLOSED)
4.0- 5.0VOLTS (IGNITION SW ON AND THROTTLE VALVE OPEN)
VC - E2: 4.0- 6.0VOLTS (IGNITIO SW ON)
VS - E2: 4.0- 5.0VOLTS (IGNITION SW ON AND MEASURING PLATE FULLY CLOSED)
0.02-0.08VOLTS (IGNITION SW ON AND MEASURING PLATE FULLY OPEN)
2.0- 4.0VOLTS (IDLING)
0.3- 1.0VOLTS (3000RPM)
THA - E2: 1.0- 3.0VOLTS (IGNITION SW ON AND INTAKE AIR TEMP. 20°C (68°F))
THW - E2: 0.1- 1.0VOLTS (IGNITION SW ON AND COOLANT TEMP. 80°C (176°F))
STA - E1(E11): 6.0-14.0VOLTS (CRANKING)
#10, #20 - E01, E02:10.0-14.0VOLTS (IGNITION SW ON)
IGT - E1(E11): 0.7- 1.0VOLTS (CRANKING OR IDLING)
T - E1(E11): 4.0- 6.0VOLTS WITH IGNITION SW ON AND CHECK CONNECTOR TE1-E1 NOT CONNECT
0VOLTS WITH IGNITION SW ON AND CHECK CONNECTOR TE1-E1 CONNECT
A/C - E1(E11):10.0-14.0VOLTS WITH IGNITION SW ON AND A/C SWITCH ON
ISC1, ISC2, ISC3, ISC4 - E1(E11):10.0-14.0VOLTS (IGNITION SW ON)
W - E1(E11):10.0-14.0VOLTS (NO TROUBLE (CHECK ENGINE WARNING LIGHT OFF) AND ENGINE RUNNING)
NSW - E1(E11):0VOLTS (IGNITION SW ON AND SHIFT POSITION P OR N RANGE)
10.0-14.0VOLTS (IGNITION SW ON AND EX. SHIFT POSITION P OR N RANGE)
4WD - E1(E11):10.0-14.0VOLTS (IGNITION SW ON AND CENTER DIFF LOCK SW ON)
0VOLTS (IGNITION SW ON AND CENTER DIFF LOCK SW OFF)
STP - E1(E11):10.0-14.0VOLTS (IGNITION SW ON AND STOP LIGHT SW ON)
0VOLTS (IGNITION SW ON AND STOP LIGHT SW OFF)

RESISTANCE AT ECU CONNECTORS

(DISCONNECT WIRING CONNECTOR FROM ECU)

IDL - E2:INFINITY (THROTTLE VALVE OPEN)
LESS THAN 2.3KΩ (THROTTLE VALVE FULLY CLOSED)
VTA - E2:3.5 -10.3KΩ (THROTTLE VALVE OPEN)
0.3 - 6.3KΩ (THROTTLE VALVE FULLY CLOSED)
VC - E2:4.25-8.25KΩ (AIR FLOW METER CONNECTOR DISCONNECTED)
0.2 - 0.4KΩ (THROTTLE POSITION SENSOR CONNECTOR DISCONNECTED)
VS - E2:0.02- 0.6KΩ (MEASURING PLATE FULLY CLOSED)
0.2 - 3.0KΩ (MEASURING PLATE FULLY OPEN)
THA - E2:2.0 - 3.0KΩ (INTAKE AIR TEMP. 20°C (68°F))
THW - E2:0.2 - 0.4KΩ (COOLANT TEMP. 80°C (176°F))
G1, NE - G-:0.14-0.18KΩ
ISC1, ISC2, ISC3, ISC4 - +B:10-30Ω

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 4	19	F 9	B 19	I10	20
C 1	19	F13	20	N 1	19
C 8	20	F18	21	N 3	20
C11	20	I 1	19	O 4	19
C12	20	I 2	19	O 5	19
D 1	19	I 3	19	S 9	20
E 1	19	I 4	19	T 1	19
E 2	19	I 5	19	V 1	19
E 4	A 20	I 6	19	V 2	19
E 5	B 20	I 7	19	V 3	19
E 6	C 20	I 8	19	W 1	19
F 8	A 19	I 9	19		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	16	R/B NO.2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	22	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EB1	22	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE R/B NO.2)
ID2	24	COWL WIRE AND FLOOR NO.1 WIRE (LEFT KICK PANEL)
IG1	24	COWL WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IH1		
IH2	24	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
BO1	26	FLOOR NO.1 WIRE AND LUGGAGE ROOM NO.2 WIRE (BESIDE THE FUEL TANK)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	22	FRONT SIDE OF LEFT FENDER
EC	22	AIR INTAKE CHAMBER
ID	24	LEFT KICK PANEL
BF	26	UNDER THE CENTER CONSOLE BOX

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 6			I 7		
E 7			I11		
E 8	22	ENGINE WIRE	I12	24	COWL WIRE
E 9			I13		
E10			I14		
E12	22		I17	24	ENGINE WIRE
I 6	24	COWL WIRE			




ENGINE CONTROL

A 4 BLACK




C 1 DARK GRAY

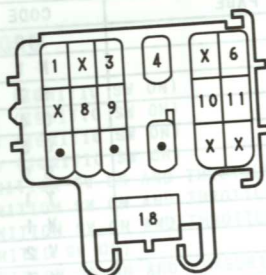


C 8 DARK GRAY



C 11 GRAY

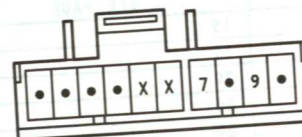

C 12 BROWN

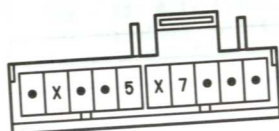

D 1 DARK GRAY




E 1 GREEN




E 2 DARK GRAY




E 4 (A) DARK GRAY

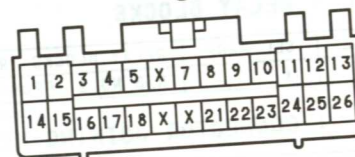

E 5 (B) DARK GRAY

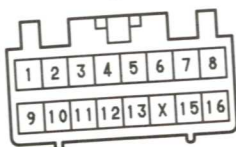

E 6 (C) DARK GRAY

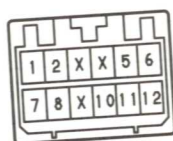


F 8 (A), F 9 (B)



F 13

(SEE PAGE 18)

F 18 DARK GRAY

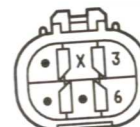

I 1 GRAY



I 2 BLACK



I 3 BLACK




I 4, I 5, I 6 BROWN



I 7, I 8, I 9 GRAY



I 10 BLACK

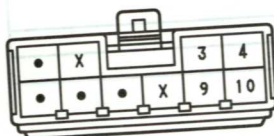

N 1 GRAY



N 3




O 4, O 5 DARK GRAY



S 9



T 1 BLACK

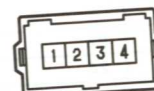

V 1 GRAY



V 2 BLUE



V 3 BROWN



W 1 GRAY

